

表面抵抗測定用電極 SURFACE RESISTANCE MEASUREMENT ELECTRODE

取扱説明書 / Instruction Manual

2013 年 9 月 改訂 3 版 Printed in Japan SM8301A980-03 13-09H

600189413

1308

10-09

日置電機株式会社

■ 製品のお問い合わせはコールセンターまで

20120-72-0560 ^{9:00~12:00,13:00~17:00} 土・日・祝日を除く

TEL 0268-28-0560 FAX 0268-28-0569 E-mail info@hioki.co.jp

■ 修理・校正のご依頼はお買上店(代理店)または最寄りの営業所まで また、ご不明な点がありましたらサービスお問合せ窓口まで

TEL 0268-28-0823 FAX 0268-28-0824 E-mail cs-info@hioki.co.jp

■ お問い合わせ・販売ネットワーク

http://www.hioki.co.jp/contact/

本社 〒386-1192 長野県上田市小泉 81 TEL 0268-28-0555 FAX 0268-28-0559

保証書 HIOKI						
形名	SME-8301	製造番号	保証 購入		月より1	年間
5一ご使用 無償修理を 局合は、事	目中に故障が発生 させていただき と品の製造年月か 【については、明	査を経て合格した製、 した場合は、お買い、 ます。また、保証期 ら1年を目安としま 示された確度保証期	求め先にご連絡く 間は購入日より1 す。ご連絡の際は	ださい。z 年間です。	購入日が	下明の
- 注約1 · 1 2 芳名:						
保証書 「製造科	番号、購入日」お	しませんので、大切(よびお客様「ご住所 お願いいたします。			が、お客様	にて記入
期間内 請求に 一定期	に故障した場合 対しては、弊社 間を経過したも	ラベル(刻印を含む) には、無償修理いたし 審議の上購入金額ます のおよび部品の生産 校正等を辞退する場合	ノます。また、製品 の補償とさせてい P止、不測の事態の	品のご使用 いただきま	による損失 す。なお、	の補償 製造後
- 1. 製品 - 2. 製品 - 3. 取扱 - 5. 取扱 - 5. お外 取扱 - 7. 外 お 各 保 で - 9. 保 そ - 9. - 10. - 12. 特別	そ使用した結果 約の測定結果がもか 2歳明常に基づかれた 2歳明常に基づかれた 2歳以別書による修理された。 2歳以別書にの示ささ 2、風水生、地震 近子の他に、地震 近子の他本社の責任と 5本の用途(宇宙月 5本の用途(宇宙月	、落雷、電源異常(変等の不可抗力による - ク接続による損害	二次的、三次的な 次的な損傷、被害 い、または使用に よび損傷 電圧、周波数等)、 含な障称よび損傷 原子力用機器、生	損傷、被 よる故障 戦争・暴 命に関わ	- 動行為、放 る医療用機	器および
		み有効です。(This				
サービ	ス記録					_
	8	サービス内容	□日置電	磯株	:式会:	26.280日
年月						情報選

ーーーーー HIOKI はじめに

このたびは、HIOKI SME-8301 表面抵抗測定用電極 を ご選定いただき、誠にありがとうございます。この製 品を十分にご活用いただき、末長くご使用いただくた めにも、取扱説明書はていねいに扱い、いつもお手元 に置いてご使用ください。

点検

本器がお手元に届きましたら、輸送中において異常ま たは破損がないか点検してからご使用ください。万一、 破損あるいは仕様どおり動作しない場合は、お買上店 (代理店)か最寄りの営業所にご連絡ください。

概要

本器は試料に電極を押し付けるだけで簡単に試料の表 面抵抗を測定するための電極です。主に SM-8200 シ リーズ超絶縁計と組み合わせてご使用ください。

安全について

この取扱説明書には本器を安全に操作し、安全な状態 に保つのに要する情報や注意事項が記載されていま す。本器を使用する前に下記の安全に関する事項をよ くお読みください。

安全記号

使用者は、取扱説明書内の ▲マークのある ところは、必ず読み注意する必要があること を示します。

取扱説明書の注意事項には、重要度に応じて以下の表 記がされています。

操作や取扱いを誤ると、使用者が死亡また **① 警告** は重傷につながる可能性があることを意味 します。 製品性能および操作上でのアドバイス的な ことを意味します

注記 ことを意味します。

ご使用にあたっての注意

本器を安全にご使用いただくために、また機能を十二 分にご活用いただくために、下記の注意事項をお守り ください。

使用前の確認

使用前には、保存や輸送による故障がないか、点検と 動作確認をしてから使用してください。故障を確認し た場合は、お買上店(代理店)か最寄りの営業所にご 連絡ください。

<u>▲</u>警告 リード線の被覆が破れたり、金属が露出してい ないか、使用する前に確認してください。損傷 がある場合は、感電事故になるので、お買上店 (代理店)か最寄りの営業所にご連絡ください。

<u>注記</u>

測定するものの絶縁抵抗が非常に大きいものについて は、誘導などの影響でよく測定できない場合がありま す。値がはっきりしないような場合には、SME-8320分 銅電極で測定し確認することも必要です。

各部の名称

ケーブルの長さ:約1m



測定方法

- 本器付属のリードをSM-8200シリーズ超絶縁計の Rx 端子に接続します。
- 2. 試料を準備し、測定したい部位に電極を押し当て て測定します。

保守・サービス

Ŵ

- 本器の汚れをとるときは、柔らかい布に水か中生、 剤を少量含ませて、軽く拭いてください。ベンジン、 アルコール、アセトン、エーテル、ケトン、シンナー、 ガソリン系を含む洗剤は絶対に使用しないでください。変形、変色することがあります。
- 故障と思われるときは、お買上店(代理店)か最寄 りの営業所にご連絡ください。
- 輸送中に破損しないように梱包し、故障内容も書き 添えてください。輸送中の破損については保証しか ねます。



SURFACE RESISTANCE MEASUREMENT ELECTRODE

Instruction Manual

September 2013 Revised edition 3 Printed in Japan SM8301A980-03 13-09H



HIOKI E.E. CORPORATION

Headquarters

81 Koizumi, Ueda, Nagano 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp URL http://www.hioki.com/ (International Sales and Marketing Department)

For regional contact information, please go to our website at http://www.hioki.com.

The Declaration of Conformity for instruments that comply to CE mark requirements may be downloaded from the HIOKI website.

Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of one (1) year from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

Introduction

Thank you for purchasing the HIOKI Model SME-8301 Surface Resistance Measurement Electrode. To obtain maximum performance from the device, please read this manual first, and keep it handy for future reference.

Inspection

When you receive the device, inspect it carefully to ensure that no damage occurred during shipping. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

Safety Information

This manual contains information and warnings essential for safe operation of the device and for maintaining it in safe operating condition. Before using it, be sure to carefully read the following safety precautions.

Safety Symbols

 $\begin{tabular}{|c|c|c|c|} \hline & In the manual, the \underline{A} symbol indicates particularly important information that the user should read before using the device. \end{tabular}$

The following symbols in this manual indicate the relative importance of cautions and warnings.

MARNING Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user.

NOTE Indicates advisory items related to performance or correct operation of the device.

Ŵ

Operating Precautions

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

Preliminary Checks

Before using the device the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.

<u> AWARNING</u>

1307

Before using the device, make sure that the insulation on the test leads is undamaged and that no bare conductors are improperly exposed. Using the device in such conditions could cause an electric shock, so contact your dealer or Hioki representative for repair.

NOTE

If the measured object has an extremely large insulation resistance, its resistance may not be measured due to induction effect, etc. If the resistance value is not definite, make measurement using Model SME-8320 Weight Electrode.

Overview

This is an electrode which enables simple sample surface resistance measurement with only this electrode pressed onto the sample. Use this device mainly together with Model SM-8200 Series Super Megohm Meter.

Name of Parts

Cable length: Approx. 1 m



Measurement Procedure

- Connect the attached lead to the Rx terminal of Model SM-8200 Series Super Megohm Meter.
- Measurement can be performed if the necessary samples are prepared and the electrode is pressed against a measured section of the respective sample.

Maintenance and Service

- To clean the device, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.
- If the device seems to be malfunctioning, contact your dealer or Hioki representative.
- Pack the device so that it will not sustain damage during shipping, and include a description of existing damage. We cannot accept responsibility for damage incurred during shipping.