# 9143,9143-10

# ピンセットプローブ **PINCHER PROBE**

### 取扱説明書 / Instruction Manual

2013 年 9 月 改訂 3 版 Printed in Japan 9143A980-03 13-09H

### ΗΙΟΚΙ 日置電機株式会社

■ 製品のお問い合わせはコールセンターまで

**20120-72-0560** 9:00~12:00,13:00~17:00 土・日・祝日を除く

TEL 0268-28-0560 FAX 0268-28-0569 E-mail info@hioki.co.jp

■ 修理・校正のご依頼はお買上店(代理店)または最寄りの営業所まで また、ご不明な点がありましたらサービスお問合せ窓口まで

TEL 0268-28-0823 FAX 0268-28-0824 E-mail cs-info@hioki.co.jp

■ お問い合わせ・販売ネットワーク

http://www.hioki.co.jp/contact/

本社 〒386-1192 長野県上田市小泉 81 TEL 0268-28-0555 FAX 0268-28-0559





### はじめに

このたびは、HIOKI 9143.9143-10 ピンセットプローブ をご選定いた だき、誠にありがとうございます。この製品を十分にご活用いただき、 末長くご使用いただくためにも、取扱説明書はていねいに扱い、いつ も手元に置いてご使用ください。

# 概要

9143 および 9143-10 ピンセットプローブは弊社 LCR メータ、イン ピーダンスアナライザ、C ハイテスタの測定端子(UNKNOWN 端 子)に直接接続して使用するピンセット形プローブです。チップ部 品などの測定に利用できます。尚、ピンセット先端は2端子構造と なっており、測定は2端子測定となります。

# 仕様

測定可能周波数範囲	$ m DC\sim 5~MHz$
最大印加電圧	$DC \pm 40V$
	(42Vpeak(測定信号+バイアス電圧))
最大印加電流	1Apeak(測定信号+バイアス電流)
先端電極間隔	0.3~約 6 mm
プローブの長さ	約 1000 mm
使用ケーブル	9143 : 特性インピーダンス 75 Ω
	(1.5C-2V 相当 x 4)
	9143-10:特性インピーダンス 50 Ω
	(1.5D-2V 相当 x 4)
残留パラメータ値	C<1 pF, L<0.5 μH, R<0.05 Ω (1 kHz 時, 参考值)
質量	9143: 約 180 g , 9143-10: 約 160 g
使用場所	高度 2000m 以下、汚染度 2、屋内
使用温湿度範囲	0~40℃, 80%rh 以下 , 結露なきこと
保存温湿度範囲	-10 ~ 55℃, 80%rh 以下 , 結露なきこと
付属品	取扱説明書
適合規格(安全性)	EN61010
測定可能範囲	

□ : 製品仕様 x 1 □ : 製品仕様 x 2.5 □ : 製品仕様 x 3 □ : 不可 製品仕様は、組み合わせる測定器の取扱説明書を参照してください。 9143 2 3503/ 3511-50/ 3522-50,9143-10 2 IM3523/ IM3533/ IM3533-01/IM3590 を組み合わせた場合の確度仕様

レンジ	DC $\sim$	1 mHz $\sim$	100 Hz $\sim$	1 kHz $\sim$	10.01 kHz $\sim$
100 MΩ					
10 MΩ					
1 MΩ					
100 kΩ					
10 kΩ					
1 kΩ					
100 Ω					
10 Ω					
1Ω					
100 m $\Omega$					

9143と3532-50/3532-80,9143-10とIM3570/3505/3506を組み合 わせた場合の確度仕様

レンジ	4 Hz $\sim$	100 Hz $\sim$	$\stackrel{1.001}{\sim}$ kHz	$^{10.01}_{\sim}$ kHz	$^{100.1}_{\sim}$ kHz	$\stackrel{1.001}{\sim}$ MHz
100 MΩ						
10 MΩ					·	
1 MΩ						
100 kΩ						
10 kΩ						
1 kΩ						
100 Ω						
10 Ω						
1Ω						
100 m $\Omega$						

接続可能機種については、弊社カタログをご覧ください。

# 検・保守

#### 点検

10-09

本器がお手元に届きましたら、輸送中において異常または破損がない か点検してからご使用ください。万一、破損あるいは仕様どおり動作 しない場合は、お買上店(代理店)か最寄りの営業所にご連絡ください。 使用前の確認

- 使用前には、保存や輸送による故障がないか、点検と動作確認をし てから使用してください。故障を確認した場合は、お買上店 (代理 店)か最寄りの営業所にご連絡ください。
- プローブの被覆が破れたり、金属が露出していないか、使用する前 に確認してください。損傷がある場合は、感電事故になるので、お 買上店(代理店)か最寄りの営業所にご連絡ください。

#### 保守・サービス

- 本器の汚れをとるときは、柔らかい布に水か中性洗剤を少量含ませ て、軽く拭いてください。ベンジン、アルコール、アセトン、エーテル、 ケトン、シンナー、ガソリン系を含む洗剤は絶対に使用しないでくだ さい。変形変色することがあります。
- 故障と思われるときは、お買上店(代理店)か最寄りの営業所にご連 絡ください。輸送中に破損しないように梱包し、故障内容も書き添 えてください。輸送中の破損については保証しかねます。

# 安全について

本器を安全にご使用いただくために、また機能を十二分に活用いただ くために、下記の注意事項をお守りください。

### ▲警告

この機器は測定方法を間違えると人身事故や機器の故障につ ながる可能性があります。取扱説明書を熟読し、十分に内容 を理解してから操作してください。万一事故があっても、弊 社製品が原因である場合以外は責任を負いかねます。

### 安全記号



取扱説明書の注意事項には、重要度に応じて以下の表記がされていま す。

- ▲ 警告 操作や取扱いを誤ると、使用者が死亡または重傷につなが る可能性があることを意味します。
- <u>
  入 注意</u>操作や取扱いを誤ると、使用者が傷害を負う場合、または 機器を損傷する可能性があることを意味します。
  - **注記**製品性能および操作上でのアドバイス的なことを意味しま

#### 規格に関する記号

X	¥	EU 加盟国における、電子電気機器の廃棄にかかわる法規
X	X	制 (WEEE 指令 ) のマークです。
(	(	欧州共同体閣僚理事会指令 (EC 指令 ) が示す安全規制に適
C	C	合していることを示します。

# 使用上の注意

### ⚠注意

- 直射日光や高温、多湿、結露するような環境下での、保存や使用 はしないでください。変形、絶縁劣化を起こし、仕様を満足しな くなります。
- 腐食性ガスや爆発性ガスが発生する場所では使用しないでくださ い。本器を破損する可能性があります。
- 本器は防じん・防水構造となっていません。ほこりの多い環境や 水のかかる環境下で使用しないでください。故障の原因になりま す。
- 本器の損傷を防ぐため、運搬および取扱いの際は振動、衝撃を避 けてください。特に、落下などによる衝撃に注意してください。本 器を破損します。
- 水に濡れたり、油、埃でひどくなった時は、使用を中止し弊社の 修理サービスをお受けください。
- 接続機器の取扱い方法および直流電圧の印加方法については、接 続機器の取扱説明書をご覧ください。
- 接続先の測定器によって使用できるピンセットプローブが異なりま す。誤って使用した場合は測定誤差が大きくなる恐れがあります。

# 各部の名称



接続方法

### ▲ 注意

BNC コネクタを引き抜くときは、必ずロックを解除してから、コネ クタを持って引き抜いてください。ロックを解除せずに無理に引っ 張ったり、プローブを持って引っ張るとコネクタ部を破損します。



BNC プラグを接続機器の UNKNOWN 端子に接続します。 赤色プラグ:H<sub>CUR</sub> 端子または H<sub>POT</sub> 端子へ接続

黒色プラグ: L<sub>CUR</sub> 端子または L<sub>POT</sub> 端子へ接続

# オープン補正・ショート補正

測定精度を上げるため、オープン補正とショート補正を行ってください。

#### 注記

接続機種の操作方法は機種により違います。その機種の取扱説明書を 参照してください。

#### オープン補正方法

プローブ先端の電極を開放状態にして、オープン補正します。

電極の間隔を、試料の間隔と同じにしてください。

#### ショート補正方法

プローブ先端の電極を閉じた状態にして、ショート補正します。プ ローブは適切な力で閉じてください。

# 測定方法

プローブ先端の電極で試料を挟み、測定します。

### ⚠注意

測定器の損傷を防ぐため、DC バイアスを印加した状態で、電極を 短絡しないでください。

#### 注記

- 試料を挟む場合、加える力の強さにより接触抵抗の値が変化しま す。低インピーダンス素子の測定や、ショート補正では、接触抵抗 の影響を大きく受けますので、適切な力で挟んでください。
- 電極や試料の接触面が汚れていると、接触不良になり、正確な測定 ができなくなりますので、注意してください。
- オープン補正や、高インピーダンス素子の測定では、外来の誘導雑 音や浮遊容量の影響を受けやすいので、ガード端子に接続した金属 板上で行うなど、ガーディング処理をすることをお勧めします。 (ガーディング処理については、接続機器の取扱説明書を参照して ください。)

# 9143,9143-10

# **PINCHER PROBE**

### **Instruction Manual**

September 2013 Revised edition 3 Printed in Japan 9143A980-03 13-09H



For regional contact information, please go to our website at http://www.hioki.com.

The Declaration of Conformity for instruments that comply to CE mark requirements may be downloaded from the HIOKI website.

#### Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of one (1) year from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

#### Introduction

Thank you for purchasing the HIOKI 9143,9143-10 PINCHER PROBE. To obtain maximum performance from the product, please read this manual first, and keep it handy for future reference.

### Overview

The HIOKI 9143 and 9143-10 PINCHER PROBE is a pincher probe that can be directly connected to the measurement terminals ("UNKNOWN" terminals) of the HIOKI LCR Meters, Impedance Analyzers, C HiTESTER. They can be used to measure chip components. The probe tip has a dual-terminal structure and can perform two-terminal measurements.

# **Inspection and Maintenance**

### **Initial Inspection**

When you receive the product, inspect it carefully to ensure that no damage occurred during shipping. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

#### **Preliminary Checks**

- · Before using the product the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.
- Before using the product, make sure that the insulation on the probes is undamaged and that no bare conductors are improperly exposed. Using the product in such conditions could cause an electric shock, so contact your dealer or Hioki representative for repair.

### **Maintenance and Service**

- To clean the product, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.
- If the product seems to be malfunctioning, contact your dealer or Hioki representative. Pack the product carefully so that it will not be damaged during shipment, and include a detailed written description of the problem. Hioki cannot be responsible for damage that occurs during shipment.

# **Specifications**

Measurement frequency range	DC to 5 MHz
Maximum apply voltage	±40 VDC (42 Vpeak (Measurement signal + bias voltage))
Maximum apply current	1 Apeak (Measurement signal + bias current)
Electrode tip spacing	0.3 to approx. 6 mm
Probe length	Approx. 1000 mm (39.37")
Cable type	9143: 75 $\Omega$ coaxial cable 9143-10: 50 $\Omega$ coaxial cable
Residual parameter values	C<1 pF, L<0.5 $\mu$ H, R<0.05 $\Omega$ (at 1 kHz, nominal values)
Mass	9143: Approx. 180 g (6.3 oz.) 9143-10: Approx. 160 g (5.6 oz.)
Operating environment	Indoors, Pollution Degree 2 altitude up to 2000 m (6562-ft.)
Operating temperature and humidity range	0 to 40°C (32 to 104°F),80%RH or less (with no condensation)
Storage temperature and humidity range	-10°C to 55°C (14 to 131°F),80%RH or less (with no condensation)
Accessory	Instruction Manual
Applicable Standards	EN61010
Measurable range	

isurable range

: Product specifications x 1 : Product specifications x 3

: Product specifications x 2.5 - : Not measurable

For product specifications, refer to the manual of the measuring instrument to be used with the probe.

Accuracy specifications for the combination of 9143 and 3503,3511-50,3522-50, 9143-10 and IM3523, IM3533,

	DC	1 mHz	100 Hz	1 kHz	10.01 kHz
100 MΩ					
10 MΩ					
1 MΩ					
100 kΩ					
10 kΩ					
1 kΩ					
100 Ω					
10 Ω					
1Ω					
$100 \text{ m}\Omega$					

Accuracy specifications for the combination of 9143 and 3532-50, 3532-80, 9143-10 and IM3570, 3505, 3506:

Range	4 Hz -	100 Hz -	1.001 kHz -	10.01 kHz -	100.1 kHz -	1.001 MHz -
100 MΩ						
10 MΩ						
1 MΩ						
100 kΩ						
10 kΩ						
1 kΩ						
100 Ω						
10 Ω						
1Ω						
100 m $\Omega$						

Please check a HIOKI catalog for instruments to which this product can be connected.

## Safetv

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

### 

Mishandling during use could result in injury or death, as well as damage to the product. Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from product defects.

#### Safety Symbol



The following symbols in this manual indicate the relative importance of cautions and warnings.

<u> MARNING</u>	Indicates that incorrect operation presents a significant haz- ard that could result in serious injury or death to the user.
A CALITION	Indicates that incorrect operation presents a possibility of

- <u>**CAUTION</u>** injury to the user or damage to the product.</u>
- Advisory items related to performance or correct operation NOTE of the product.

### Symbols for Various Standards



WEEE marking: This symbol indicates that the electrical and electronic appliance is put on the EU market after August 13, 2005, and producers of the Member States are required to display it on the appliance under Article 11.2 of Directive 2002/96/EC (WEEE).

This symbol indicates that the product conforms to safety regulations set out by the EC Directive.

# Usage Notes

### **ACAUTION**

- Do not store or use the product where it could be exposed to direct sunlight, high temperature or humidity, or condensation. Under such conditions, the product may be damaged and insulation may deteriorate so that it no longer meets specifications.
- Do not use the product where it may be exposed to corrosive or combustible gases. The product may be damaged.
- This product is not designed to be entirely water- or dustproof. To avoid damage, do not use it in a wet or dusty environment.
- To avoid damage to the product, protect it from vibration or shock during transport and handling, and be especially careful to avoid dropping.
- If the fixture has gotten seriously wet, oily, or dusty, stop using it and send it for service at an approved HIOKI service facility.
- Please refer to the instruction manual for the instrument to which this product is connected for how to use the instrument and apply direct current voltage.
- Which pincher probe can be used depends on the measuring device to which this product is connected. Using a wrong fixture may increase the measurement error.

# Parts Names



IM3533-01, IM3590:

# **Connecting the Probe**

### $\triangle$ CAUTION

When disconnecting the BNC connector, be sure to release the lock before pulling off the connector. Forcibly pulling the connector without releasing the lock, or pulling on the probe, can damage the connector.





Connect the BNC connector to the measurement terminals (UNKNOWN) of the tester

Red plugs: connect to  $H_{CUR}$  or  $H_{POT}$  terminal Black plugs: connect to  $L_{CUR}$  or  $L_{POT}$  terminal

# **Open and Short Circuit** Compensation

To enhance the accuracy of measurement, perform the open and short circuit compensation.

### NOTE

Procedures for connecting and using this product vary according to the instrument with which it is used. Refer to the instruction manual for the specific instrument.

#### **Open circuit compensation**

Open the probe tip electrodes and compensate for open circuits. The space between the electrodes must equal the sample width.

#### Short circuit compensation

Close the probe tip electrodes and compensate for short circuits. Be sure to apply adequate force when closing the electrodes.

### Measurement

Hold the sample between the probe tip electrodes for measurement.

#### 

To avoid damage to the tester, do not short circuit between the electrode of the test probe with the DC bias voltage still being applied.

#### NOTE

- · The contact resistance varies with the actual force applied to the sample held between the probe electrodes. Changes in contact resistance may affect the measurement of a lowimpedance element and short-circuit compensation. Be sure to apply adequate force when holding a sample between the electrodes.
- · Confirm that contact surfaces of the electrodes and sample are clean. A dirty surface may result in contact failure and thereby cause measurement error.
- The measured value obtained when testing a high impedance element or performing open-circuit compensation may sometimes be unreliable due to their vulnerability to external interference or floating capacitance. In this case, reliable testing can be performed by the use of guarding, that is, connecting a metallic plate to the GUARD terminal and carrying out the measurement on the metallic plate. (For guarding, see the instruction manual of the respective tester.)