## FIELD HI TEST PACK

# 3124

## INSTRUCTION MANUAL



### はじめに

このたびは、ヒオキの**3124電工用総合ハイテストパック**をご 選定いただき誠にありがとうございました。

3124の全機能を十分に活用し、また末長くご使用していただく ためにも、まず説明書をよくお読みのうえご使用下さい。

目 次

1.	特	長1
2.	各部の名	.称2
3.	仕	様
4.	使用上の	)一般的な注意
5.	測 定 方	
	バッテ	リーチェック
	絶縁扣	;抗
	接地扭	就
	検	相
	検	電
	交流電	流
	抵	抗
	導	通
	交流電	上 正······18
	直流電	压
;.		「式回路保護について
		びヒューズ交換
ι.		シーン 21

1. 特 長(別売の9006 クランプオン電流変換器含む)

1台で9役の電工用総合試験器です。

電気機器、設備あるいは、配線等の保守点検に必要な絶縁抵抗 計、接地抵抗計、検相器、検電チェッカー、クランプテスタ(交 流電流計)、抵抗計、導通試験器、交流電圧計、直流電圧計の9 つの機能が1台にまとめられています。 2. 各部の名称

(1) 3124



3 ----

### 3. 仕 様

1) 測定範囲及び許容差

絶縁抵抗:250V/50MΩ 目盛指示値の±5%(0.05M~20MΩ)

11

土10%(その他目盛)

500V/100MΩ 目盛指示値の±5% (0.1M~50MΩ)

" ±10%(その他目盛)

0、∞目盛は目盛長の0.7%以下

測定端子電圧:1MQ目盛にて各定格電圧の90%以上

接地抵抗:10/100/1000Ω 最大目盛値の±3%(電位差計式)

交流電圧:0~30V(整流形) 最大目盛値の±3%、AC50/60Hz

70~130V/140~260V/280~520V (整流形拡大目

盛) 最大目盛値の±1.5%、AC50/60Hz 交流電流:3/10/30/100/300A(実効値指示形)別売9006による 最大目盛値の±3%、AC50/60Hz

抵 抗:0~500Ω 目盛長の±3% 中央目盛 10Ω

開放端子電圧 300mV

直流電圧: 3/30/300V 最大目盛値の±3%

導 通:約100Ω以下の抵抗値にてブザー音

検 相:LEDの点灯による表示

使用電圧範囲 AC70~450V

正相:緑点灯、逆相:赤点灯、欠相:無点灯

検 電:LEDの点灯表示及びブザー音

使用電圧範囲 AC80~300V

2) 過負荷保護 ヒューズ保護(ヒューズ定格 1A 250V)

レンジ切換 スイッチ	端子	
Ω	Ω 測定端子	AC 100V 1分間
導 通	導通測定端子	AC 100V 1分間

3) 外形寸法及び重量

約143H×230W×143Dmm

約1.8kg

4) 使用電池 SUM-3 8個

5) 付属品

①9046モールド形テストリード	1組
②9040接地抵抗測定リード	1組
③9049補助接地棒	2 本
④9047検相器用コネクタ	1個
⑤9027MΩ手元スイッチ付プローブ	1組
⑥予備ヒューズ (1A)	1個
⑦付属品収納袋	1個
⑧肩掛用バンド	1本

5

3)売アクセサリー
 9050接地棒(2枚1組)
 9006クランプオン電流変換器

### 4. 使用上の一般的な注意

- ①電源スイッチを押したり、ロックして、測定した時は、測 定終了後必ず電源スイッチをOFFにして下さい。
- ②持ち運ぶ時は上ケースを閉じて下さい。
- ③上ケース(メータ部)の開閉に際しては、静かに行なって下 さい。
- ④測定端子及び測定レンジを確認してから測定して下さい。 誤操作しますと、非常に危険ですので必ず確認後に測定す るようにして下さい。
- ⑤測定しようとする電圧値、電流値が不明の場合は、必ず最 大レンジで測定を行い、測定レンジの目安をつけてから最 適レンジで測定して下さい。
- ⑥ 測定中にレンジの切換は行なわないで下さい。切換時には 測定リード類を測定物から離してから切換えて下さい。
- ⑦電子レンジ等の高周波数機器での高圧回路測定は、一般商用周波数における数分の一程度の耐圧しかもちませんので 危険ですので避けて下さい。
- ⑧大容量の電源設備等での測定は、非常に危険ですので細心の注意をはらって行なって下さい。
- ⑨保管に際しては、高温多湿の場所は避けて下さい。
- ①付属品は付属収納袋に入っています。
- ①メータ部と電気回路部は導線で結線されていますので、上 ケースと下ケース間の金属部は回路とは完全に絶縁されて
  - います。

12検相器はインバータでは使用できません。

### 5. 測 定 方 法

- 5-- バッテリーチェック
  - (1)レンジ切換ツマミを パッテリー チェック にセットします。
  - ②電源スイッチを押して指針がIBATT.OK マークにくるこ を確認して下さい。IBATT.OK のマークから指針がはずれ た時は、電池が消耕していますので新しい電池と交換して 下さい。
    - △ 絶縁抵抗計(500V/100MΩ)の最大負荷状態でバッテリー チェックをしていますので、バッテリーチェックは短時 間に行って下さい。
    - △電源スイッチをOFFにしても指針が若干振れることがあ りますが、これは回路のコンデンサーに約0.6V充電され ているためです。
- 5-2 絶縁抵抗
  - ①バッテリーチェックを行ないます。
  - ②レンジ切換ツマミを<sup>絶縁抵抗</sup>の位置にセットします。
  - ③500Vで絶縁抵抗を測定する時は絶縁抵抗レンジ切換ツマミ
  - を500Vに、250Vで測定する時は250Vにセットします。 ④MΩ手元スイッチ付プローブをMΩ手元スイッチ付プローブ 端子に接続します。
  - ⑤MΩ測定用リードを測定端子(EARTH)に接続します。
  - ⑥手元スイッチ付プローブとMΩ測定用リードの先に被測定物 を接続して、手元スイッチ付プローブのスイッチを押すと 被測定物の絶縁抵抗が指示計に表われます。(手元スイッチ 付プローブを使用する場合は、本体の電源スイッチを押す 必要はありません)
  - ⑦絶縁抵抗レンジ切換ツマミを500Vの位置にセットした時は

指示計の上位のMΩ目盛値を又250Vの位置にセットした時 は下位のMΩ目盛値を使用します。

⑧指示計の上位のMΩ目盛値(500V)で目盛数値がない場合は 下位MΩ目盛値(250V)の目盛数値を2倍して下さい。

例)指針位置 250Vで測定した 500Vで測定した (下位目盛)時の読み値 時の読み値

0	0	0
0.3	<b>0.3M</b> Ω	<b>0.6M</b> Ω
1	<b>1 Μ</b> Ω	2 ΜΩ
3	3 ΜΩ	<b>6 Μ</b> Ω
10	<b>10 Μ</b> Ω	<b>20</b> ΜΩ
50	<b>50 M</b> Ω	<b>100</b> ΜΩ

⑨手元スイッチ付プローブー式を使用しないで、テストリードを使用する時は、測定端子(EARTH, LINE)にテストリードを接続し本体の電源スイッチを押して、テストリードで測定して下さい。

8

MΩ手元スイッチ付プローブを使用する時



テストリードを使用する時 (MΩ手元スイッチ付プローブを使用しない)



9

5-3 接地抵抗

①バッテリーチェックを行ないます。

- ②レンジ切換ツマミを 使地抵抗 の位置にセットします。
- ③付属の補助接地棒(C)を被測定接地体(E)より10~20mの 間隔に、他の補助接地棒(P)を補助接地棒(C)と被測定接 地体(E)とを結んだ直線上のほぼ中央の位置にそれぞれ地 中に打ち込み、3124本体の端子E.P.Cに接続コードでそれ ぞれ接続します。
- ④接地工事の種類に応じて、レンジ切換ツマミを適当な抵抗 レンジに合せ、電源スイッチを押しながらERボリュームを 回して、検流計のバランスをとります。
- ⑤検流計のバランスがとれたら、指示計のERの目盛を読みます。
- ⑥指示計のERの目盛値にレンジの倍率を掛けた値が求める測定値になります。
- ⑦抵抗レンジの選定は、原則として、まず×100Ωレンジにて 測定し、必要に応じてレンジを下げて測定を行なって下さい。



- 10 --

5-3-1 補助接地棒の使用要領について

接地抵抗(3電極法)の測定には、2本の補助接地極が必要で す。補助接地棒の打ち込み方法が悪いと、正確な測定が行な れないことがあります。

①接地電極間距離

図(a)に示すようにE-C電極間をlmとし、E-P電極間 の距離xmを変えて接地体(E)の接地抵抗を測定すると、(b) に示すような測定値が得られます。したがって、補助接地 棒(P)の位置が接地体(E)あるいは補助接地棒(C)に近く なると誤差を生じます。又、E-C電極間距離が短いと被 測定接地抵抗(Re)と補助接地棒の接地抵抗(Rc)とが分離 できなくなり、測定誤差を生じます。



②電極位置関係について

原則的には補助接地棒(P)は、接地体(E)と補助接地棒(C) とを結ぶ直線上の中央に打込むことが理想的です。しかし 障害物等があって打込めない場合には、図(6)に示すよう に接地体(E)、補助接地棒(C)より半径5m以内の領域を 避けて打込めば、ほぼ正確な測定ができます。



③補助接地棒の接地抵抗について

通常、本器では補助接地棒の接地抵抗が10KΩ程度まで測定 に支障のないように配慮してありますが、特に第一種接地 工事のように低い接地抵抗を測定する場合、補助接地棒の 接地抵抗が大きいと測定感度が不十分なことがあります。 このような場合には、接地棒を十分地中深く打ち込むか、 補助接地棒周辺に水をまいて、補助接地棒の接地抵抗を小 さくして測定して下さい。

(補助接地棒の抵抗は、測定すべき補助接地棒の測定コ) ードと接地体(E)の測定コードとを測定器本体の測定 端子で差し換えて測定することにより求めることがで 、きます。

5-3-2 補助接地網使用法

地面が岩石、又はコンクリートのように堅くて、接地棒の打 込みが困難な場合には、補助接地網を使用して下さい。接地 網は、なるべく地面に密着するように敷いて、十分水をかけ て測定して下さい。特に、コンクリートのように水の浸透し にくい場合には、水をかけて、しばらく時間を置いて測定し て下さい。この時、金網が乾燥していますと、地面と金網間 の抵抗が大きくなりますので測定前に再度水をかけて下さい。 又、コードと金網の接続は、図(7)のように直続クリップで 金網に接続するか、接続された接地棒を金網の上に置いて測 定して下さい。



5-3-3 地電圧について

接地体に接続された電気機器からの漏洩電流、又は地電流に より、接地体に電圧が存在する場合があります。

本器は、商用周波数に於いては、10V程度まで支障なく測定 できますが、地電圧波形が歪んでいる場合には、10V以下で も測定誤差を生じます。

したがって、通常、地電圧が5V以上ある場合には、電気機器の運転を停止するか、電気機器から接地体を切離して、地 電圧の影響のない状態で測定して下さい。又、地電圧が高い 場合には、電路又は電気機器の絶縁が劣化していることが考 えられます。絶縁試験も合わせて行なう必要があります。

5-3-4 簡易測定法(2極法)について 被測定接地体の近辺に概説の 接地体のような、予めその接 地抵抗のわかっているもの、 又は水道管のような被測定接 地体の接地抵抗より、十分小 さい接地抵抗を有するものが 存在する場合には、それらを 利用して被測定接地体の接地 抵抗を求めることができます。 図(8)に示すように、E端子 に被測定接地体を、PとC端

- 13 -

子とを一緒にして利用する接地体に接続して測定して下さい。 この場合、得られた測定値から利用した接地極の接地抵抗を 差引いた値が、被測定接地体の接地抵抗となります。ただし、 2 電極間距離が2 m以下の場合、又は水道管にビニール管な どの非導電材を使用している場合については、この簡易測定 法を用いての測定はできません。

#### 5-4 検 相

- バッテリーチェックを行ないます。
- ②レンジ切換ツマミを検相にセットします。
- ③三相交流回路に接続し、LEDの点灯により検相します。
  - ●緑が点灯した場合、接続相順はR,S,Tの順です。
  - ●赤が点灯した場合、接続相順はT,S,Rの順です。
  - ●赤・緑両方とも点灯しない場合は、どれかが欠相しています。
- △使用電圧範囲を必ず守って測定して下さい。

電源スイッチは押す必要なし。

△インバータでは使用できません。インバータの使用には、 3123, 3126を使用下さい。



- 14 -

5-5 検 電(ホットラインチェック)

①バッテリーチェックを行ないます。

②レンジ切換ツマミを検電にセットします。

- ③検電用端子にテストリードを差し込みます。
- ④テストリードを被測定物にあてチェックします。その場合 接地面からの電位が約80Vになると、ブザーが発音し赤色 LEDが点灯します。
- ⑤本器は接地側、非接地側の判別等に使用して下さい。詳し い電圧チェックは電圧計にて測定して下さい。

△ 静電誘導を利用する方式ですから ~ マークの所に手を触 れて操作して下さい。 従来の検電器のように人体に電流を流しません。 電源スイッチは押す必要はありません。

5-6 交流電流(別売の9006クランプオン電流変換器を使用し ます)

- ①レンジ切換スイッチをを「クランプCT」にセットします。
- ②9006の出力端子を本体3124の測定端子に接続します。

③9006の電源スイッチをONにします。FLASHING BATT.

LOWが点滅する場合は、9006の電池電圧が消耗しています から新しい電池と交換します。

- ④9006の0ADJ.を調整して、3124の指示計の零点を合せます。 ⑤9006のレンジ切換ツマミを最大レンジにセットします。
- ⑥クランプコアの先端を開き、導線1本をクランプの中央に 抜み込んで下さい。
- ⑦3124の指示が読み取りにくい場合は、最も読み易いレンジに切換え、3124の指示を読みとって下さい。

⑧長時間9006を連続使用する場合は別売アクセサリー9036 ACアダプタを使用して下さい。 (i)誤って3124のCT端子に電圧を加えないで下さい。



9006の使用上の一般的注意

- ○レンジを確認してから測定して下さい。各レンジの測定範 囲を越える過大電流を長時間加えますと内部回路を破損し たりする恐れがありますので注意して下さい。
- ○強い外部磁界のある場合、雑音を発生する装置のある近く 等で測定しますと、誤動作したり正確な指示をしない場合 がありますので注意して下さい。
- ○最高回路電圧が600V ACですから、600V以上の電路での測定は危険ですので避けて下さい。
- ○使用後は、必ず電源スイッチをOFFにして下さい。
- ○保管に際しては、高温多湿の場所は避けて下さい。

#### 9006の電池交換方法

- FLASHING BATT.LOWが点滅を始めましたら電池を交換 して下さい。尚長時間点滅し電池電圧が下りますと点滅しな くなります。
- ①電池カバーをスライドさせますと、電池が取り出せます。 極性に注意して新しい電池と交換します。

#### 5-7 抵 抗

バッテリーチェックを行います。

②レンジ切換ツマミを抵抗Ωにセットします。

③測定端子にテストリードを差し込みます。

④電源スイッチを押し、テストリードで測定します。⑤指示計のΩ目盛を使用します。

▲●測定端子を誤まらないように。
 ●測定端子間に誤って電圧を加えないこと。



⑥テストリードの先端をショートしても指示計の指針が零を示さないことがありますが、これは測定端子とテストリード間の接触抵抗及ヒューズ抵抗によりますので、テストリードの先端をショートした時の指示値を測定値より引いて下さい。

#### 5-8 導 通

①レンジ切換スイッチを導通にセットして下さい。

②測定端子にテストリードを接続して下さい。

- ③テストリードの先端をショートし、ブザーが発音する事を 確認して下さい。
- ④ 被測定物の両端にテストリードを接続して行なって下さい。 (約100 Ω以下の抵抗値の場合発音します)尚、このテストは 目安ですのでくわしい抵抗値を知りたい時は、抵抗計を使 用して下さい。

△テストリード間に電圧を加えない事。



5-9 交流電圧

①レンジ切換スイッチをACVにセットします。

②テストリードを測定端子に接続します。

- ③測定しようとする電圧値が不明な場合は、520Vレンジにして下さい。
- ④拡大目盛の為、定格以下の電圧を測定すると指示計の指針 が逆振します。
- ⑤AC 30Vレンジは、接地電圧の測定に利用して下さい。



5-10 直流電圧

①レンジ切換ツマミをDCVにセットして下さい。

②測定しようとする値が不明の時は、最大レンジ(300V)にセットし値を読み、その値に最適なレンジにセットして改め

て値を読み取って下さい。

③測定端子にテストリードを接続して下さい。



### 6. ヒューズ式回路保護について

1Aガラス管ヒューズにより抵抗、導通回路を保護します。 ヒューズは万一の操作ミスによる危険を最小限にくいとめ る為に付属されたものですので、たとえヒューズが切れた としても回路部品への影響が全くないとは言えませんので 誤操作のなき様取扱い、末長くご使用下さい。ヒューズは 市販品ですので最寄りの電気店等でお求め下さい。

### 7. 電池及びヒューズ交換

- ①バッテリーケース止めのネジをコインなどを利用してはず します。
- ②電池ホルダーを引きだし、ホルダーに記入された極性にし たがって交換して下さい。(単3 乾電池8本)
- ③ヒューズは1A 250Vミゼット型ガラス管ヒューズ(  $\phi 5.2 \times$ 20mm)です。 バーテリーケース内部



底部バッテリーケース

1Aヒューズ

図15

20 .

### 8. 肩掛用バンドのつけ方



バンド取付部にバンドを通し、取付棒をバンド穴に通して取り 付けます。



### WARNING

This Instrument is designed to provent accidental schock to the operator when properly used. However, no engineering design can render safe an instrument which is used carelessly. Therefore, this manual must be read carefully and completely before making any •measurement. Failure to follow directions can result in a serious or fatal accident.

## CONTENTS

1.	FEATURES 23
2.	NAME OF PARTS 24
З.	SPECIFICATIONS
4.	MAIN CAUTIONS CONCERNING USE 28
5.	HOW TO TAKE MEASUREMENTS 29
	BATTERY CHECK 29
	INSULATION RESISTANCE 29
	EARTHING RESISTANCE 32
	PHASE DETECTING
	HOT LINE CHECK 37
	AC CURRENT
	RESISTANCE
	CONTINUITY
	AC VOLTAGE
	DC VOLTAGE
6.	FUSE TYPE CIRCUIT PROTECTION 42
7.	CHANGING BATTERIES AND FUSES 42
8.	HOW TO INSTALL SHOULDER BAND 43

## 1. FEATURES

This single Test Pack handles all of the work normally done by nine regular type testers and covers all the functions needed in electrical installation and maintenance work. It contains an insulation resistance tester, earthing resistance tester, phase detector, hot line checker, AC ammeter(when nsed with the optional 9006 clamp-on current transducer), ohmmeter, continuity tester, AC voltmeter and DC voltmeter - a total of nine testers to handle every testing job called for in installing and maintaining electrical appliances, equipment and wiring.

## 2. NAME OF PARTS

(1)3124



(2)9006

## 3. SPECIFICATIONS

(Including the clamp-on current transducer)

#### 1. Reading Range and Allowable Variation

(1) Insulation Resistance

500V/100M  $\pm$  5% of reading on scale (0.1M  $\sim$  50M  $\Omega)$  Other graduations:  $\pm$  10%

In the case of 0 and  $\infty$ . not over 0.7% of scale length. Measuring terminal voltage: Over 90% of each rated voltage at 1M $\Omega$  on the scale.

- (2) Earthing Resistance
  - $10/100/1000\Omega$

 $\pm\,3\%$  of F.S.

#### (3) AC Voltage

0~30V (Rectifier type),  $\pm$ 3% of F.S., 50/60Hz AC, 70~130V/ 140~260V/280~520V (Rectifier type enlarged scale)  $\pm$ 1.5% of F.S., 50/60Hz AC

(4) AC Current (Requires use of optional 9006 clamp-on currenf transducer) 3/10/30/100.300A (RMS indicating type)  $\pm$  3% of F.S., 50/60Hz AC

(5) Resistance

 $0 \sim 500\Omega, \pm 3\%$  of Scale Length

Middle graduation: 10 Ω

open terminal voltage: 300 mV

(6) DC Voltage

3/30/300V,  $\pm 3\%$  of F.S.

(7) Continuity

Buzzer sounds when resistance drops below about  $100\Omega$ 

(8) Phase Detection

Indication given by LED lighting up voltage for use: 70~450V AC

(9) Hot Line checking (Detection)

LED lights up and buzzer sounds Voltage for use: 80~300V AC

#### 2. Protection Against Overload

Fuse protection (Fuse rating: 1A, 250V)

Range Selector Switch	Terminals	
Ω	$\Omega$ measuring terminals	100A AC 1 min.
Continuity	Continuity measuring terminals	100V AC 1min.

27

#### 3. Dimensions and Weight

Approx. 143H×230W×143Dmm Approx. 1.8kg.

#### 4. Batteries

SUM-3 (AA) 8 pcs.

#### 5. Accessories

- (a) 9046 Molded type test leads, 1 set
- (b) 9040 Earthing resistance measuring leads, 1 set
- (c) 9049 Auxiliary earthing rods, 2
- (d) 9047 Connector for phase detector, 1
- (e) 9027  $M\Omega$  probe with fingertip switch, 1
  - Spare fuse (1A), 1
- (f) Storage bag for accessories, 1
  - · Shoulder strap, 1

#### 6. Optional accessories

- · 9050 Earth nets (set of two)
- · 9006 Clamp-on current transducer



## 4. MAIN CAUTIONS CONCERNING USE

- The power switch will be pushed and locked in order to use the tester but on completion of testing do not fail to switch the power off.
- 2. In order to carry the tester around first close the upper half of the case onto the lower half.
- 3. Always open and close the upper half of the case (the meter unit) carefully.
- 4. Take measurements only after making sure that the correct terminals and range have been employed. It is important check this carefully because incorrect handling of the tester involves the risk of damage.
- 5. When it is not possible to get any idea how great an amount of voltage or current there is in the equipment being tested before actual testing beings, always use the maximum range first and then change down later if this found necessary.
- Do not change the range while actually taking a measurement. Always remove the leads from the object being tested before selecting a different range.
- 7. This tester should not be used to test high voltage circuits such as those in electronic ovens and other high frequency appliances because for such equipment several times greater dielectric strength is required than for frequencies more commonly used and such tests would therefore involve considerable danger.
- 8. Take great care when testing large capacity electrical equipment because of the danger involved.
- 9. Store the Test Pack and accessories in a cool, dry place.
- 10. Put the accessories in the bag provided for them.
- 11. A line connects the meter to the main circuit of the tester and the metal postions of the upper and lower halves of the Test Pack case are effectively insulated from the circuit.
- 12. Phase detector cannot be used with inverters in line.

## 5. HOW TO TAKE MEASURMENTS

#### **5-1 BATTERY CHECK**

(1) Turn the range selector knob to the BATTER'

position.

- (2) Depress the power switch and make sure that the needle points to the BATT. OK band. If the needle fails to move to this position on the dial the batteries are no longer suitable for use and should be changed.
  - $\triangle$  Since the battery check is carried out in the insulation resistance meter (500V/100M $\Omega$ ) maximum load condition, the check should be carried out as quickly as possible.
  - △ Sometimes the needle will deflect a little even after the power has been switched off. This is due to about a 0.6V charge in the circuit condenser.

#### **5-2 INSULATION RESISTANCE**

- (1) Carry out the battery check,
- (2) Turn the range selector to the

Insulation Resistance MO position.

- (3) To measure insulation resistance at 500V, select 500V with the range selector switch and for 250V select 250V with this same range selector.
- (4) Plug the M $\Omega$  probe with the fingertip switch into the probe terminal provided for it.
- (5) Connect the  $M\Omega$  measuring lead to the measuring (EARTH) terminal.
- (6) First connect the fingertip switch probe and  $M\Omega$  measuring lead to the appliance or equipment to be tested. Now, when the fingertip switch is pushed, the insulation resistance reading will be shown on the indicating instrument. (When using this probe with the convenient fingertip operated switch, it is unnecessary to depress the switch on the main body of the Test Pack.)

- (7) When the 500V range is selected for measuring insulation resistance, the readings are taken from the upper part of the M $\Omega$  scale and for 250V from the lower part of the scale.
- (8) When a figure is not indicated on the upper M $_{\Omega}$  (500V) scale, take a reading from the lower M $_{\Omega}$  (250V) part of the scale and multipy the figure by two.

Examples: Position Reading taken Reading taken Indicated from 250V from 500V portion of portion scale	
0 0 0	
0.3 0.3M 0.6M	
1 1M 2M	
3 3M 6M	
10 10M 20M	
50 50M 100M	

(9) When test leads are used instead of the probe with the fingertip switch, connect the leads to EARTH and LINE push the power switch on the main body of the Test Pack and take readings by using the test leads.

30 -

When using the  $M\Omega$  probe with the fingertip switch



#### When using the ordinary test leads

(Not the  $M\Omega$  probe with the fingertip switch)



#### **5-3 EARTHING RESISTANSE**

- (1) Carry out the battery check.
- (2) Turn the range selector to the

Earthing Resistance ER

- (3) One of the accessory earthing rods, C, is driven into the ground 10 to 20 meters from the body being tested, E, and then another auxiliary earthing rod, P, is driven into the ground on a straight line between E and C and about halfway between them and the connecting cords are connected to the E, P and C terminals on the main body of the Hioki 3124 Field Hi Test Pack.
- (4) Turn the selector knob to a suitable resistance range for the type of earthing being tested and then, while depressing the power switch turn the ER volume and balance the galvanometer.
- (5) When the galvanometer has been balanced, take the reading on the ER scale on the meter.
- (6) Multiply the value shown on the ER scale by the multiplying factor for the range to obtain the required measured value.
- (7) As a rule, start with the  $\times 100\Omega$  range and then, if necessary, change to a lower range and take more readings.



#### Fig. 3

- 32 -

#### 5-3-1 HOW TO USE THE AUXILIARY EARTHING RODS

Two auxiliary earthing rods are needed for the 3-pole method used in measuring earthing resistance. If the auxiliary earthing rods are not driven into the ground correctly it is sometimes impossible to measure resistance.

#### 1) Distance between earthing electrodes

As Fig. 4 shows, if the distance between E and C be I meters, and the distance E-P be x, when the earthing resistance for the earthing body E is measured, the kind of figures shown in Fig. 5 are obtained. It follows that, if P is brought close to E or to C, error will result because it is no longer possible to separate the earthing resistance being measured (Re) from that of the earthing rod (Rc).



#### 2 Relationship between positions of electrodes

As a general rule, rod P should inserted in the ground in a position on a straight line between E and C and halfway between them. However, although this is the ideal, if there is an object in the way which prevents the insertion of P in this position, fairly accurate readings can still be obtained if it is inserted outside of a 5m radius of either E or  $\mathcal{C}$ . (See Fig. 6)



### ③ Earthing resistance of the auxiliary earthing rods

Usually quite satisfactory results can be obtained in measuring when rod earth resistance is up to about  $10 k\Omega$  but if rod earthing resistance is great when attempting to measure low earth resistance.

measuring sensitivity becomes insufficient. In such cases, either drive the rods deep into the ground or wet the ground around the rod with water to lower the earthing resistance of the rod before taking a reading.

\* Auxiliary rod resistance can be measured by switching over the connections for the cords for it and earthing body E at the terminals on the main body of the tester.

### 5-3-2 Using the special accessory earth net

This met can be used where the surface is rock or concrete or other hard surface into which earthing rods cannot be driven. Put the met into as close contact with the surface as possible and wet it well with water before taking readings. Especially in the case of concrete, where weter may not soak in feadily, wait a short time before taking readings and, if the met dries out before measuring,





Fig. 7

resistance between it and the ground will be greatly increased and for this reason water should be applied a scond time.

To connect the cord to the mesh effectively, either use the clip shown in the diagram or lay the rod on top of the met. (See Fig. 7) **5-3-3 Earthing voltage** 

Sometimes there is voltage in the earthed body due to the effects of leakage current from the electrical equipment connected to the earthing body or from earth current. In the case of commercial power, a voltage of up to about 10V will not greatly affect function but in the case of wave distortion in the earth voltage, sometimes measuring error will occur even when the voltage is lass than 10V. For this reason, if the voltage is over 5V, either switch off the electrical equipment or disconnect the earthing body from it so that readings can be obtained free from the effects of earth voltage. If earth voltage is very great, this can often be attributed to deterioration of the circuit or appliance insulation. It then becomes necessary to also carry out an insulation test.

# 5-3-4 Simple (2-pole) measuring method

If there is already an earthing body near the earthing body being tested with earthing resistance already known or an object such as a water supply pipe with earthing resistance sufficiently smaller than that of the earthing body being tested, it is possible to use such objects in finding the required resistance. As Fig. 8 shows, the earthing body being tested is connected to terminal E while the leads from terminals P and C are brought together and



Fig. 8

35

connected to the other earthing body and a reading is then taken. The earthing resistance of the object being tested is then found by subtracting the earthing resistance of the electrode used from the reading obtained.

Note that it is not possible to use this simple measuring method when the distance between the two electrodes is less than 5 meters or when the water pipe is of vinyl or some other non-conducting material.

#### 5-4 PHASE DETECTING

- (1) Carry out the battery check.
- (2) Turn the range selector switch to the



#### position.

- (3) Connect to the 3-phase AC Circuit to be tested and look at the LEDs to find out whether phase-sequence is positive or negative. If the green LED lights up, the order is R,S,T but of the red LED lights up the order is T,S,R. If neither LED lights up there is probably a phase lack.
  - △ Always make sure to keep within the voltage range for use. It is not necessary to depress the power switch.
  - △This meter's phase detector function cannot be used with inverters in the line. In such cases, use 3123, or 3126. \_\_\_\_\_\_Green LED Forwardphase-sequence)



### 5-5 HOT LINE CHECK

(1) Carry out the battery check.

(2) Turn the range selector switch to the



position.

- (3) Connect the test lead to the hot line check terminal.
- (4) Bring the test lead into contact with the object to be tested and if there is then more than about an 80V potential the buzzer will sound and the red LED will light up.
- (5) This instrument can be used in telling the earthing side from the non-earthing side. For a more accurate check of voltage, use the voltmeter.

△ Since this system employs static induction, operate by simply touching the HOT LINE CHECK

Unlike older type hot line checkers, with this one current does not reach the user's body.

It is not necessary to depress the power switch.

#### 5-6 AC CURRENT

(Requires use of optional 9006 clamp-on current transducer.)

(1) Turn the range selector switch to the CLAMP CT

position.

- (2) Make a connection between the output terminal of the 9006 to the measuring terminals on the main body of the 3124.
- (3) Switch the 9006 on. If the flashing BATT. LOW Light flicks on and off, this indicates that the battery of the 9006 is exhausted and should be changed.
- (4) Carry out zero adjustment for the 9006 and for the zero point on the 3124 meter.
- (5) Select the maximum range on the 9006.
- (6) Open the clamp core end and clamp one conductor (wire) in the

center of the clamp.

(7) If the value indicated on the 3124 is not easy to read, change to 'the easiest range for reading and then take the reading.

Note: Do not impress voltage into the CT terminals of the 3124.





### General Cautions Concerning Use of the 9006

- O Check the range carefully before proceeding to take measurements because if the measuring limits for any range are exceeded and excessive current applied for any length of time there is danger that the internal circuit will be damaged.
- O Where there is a strong external magnetic field or a device close by that produces a lot of noise, etc., the tester may malfunction or not give a correct reading and such external disturbance must be avoided if possible.
- Since the maximum circuit voltage is 600V AC, to maintain safety avoid measuring voltage above this figure.
- Always switch off after use.
- O Store in a cool, dry place.

#### Replacing the Batteries in the 9006

When the flashing BATT LOW light begins to flicker, change the battery. After the light has been flashing on and off for some time, it will then be extinguished because battery power has been entirely used up.

Slide the battery case cover open and change the battery, making sure to position the  $\oplus$  and  $\ominus$  ends correctly.

#### 5-7 RESISTANCE

- (1) Carry out the battery check.
- (2) Turn the range selector switch to the OHM position.
- (3) Plug the test leads into the measuring terminals.
- (4) Depress the power switch and use the test leads to take a measurement.
- (5) Take the reading from the  $\Omega$  scale on the meter.
  - \* Take care to plug the leads into the correct terminals.
    \* Make sure to avoid impressing voltage in the measuring terminals.



#### Fig. 11

- 39 -

(6) Sometimes the needle will fail to point to the zero position even when the test lead points are shorted. This is due to contact resistance between the measuring terminals and test leads and fuse resistance. When shorting the ends of the test leads, subtract the value shown from the overall figure measured.

#### **5-8 CONTINUITY**

- (1) Turn the range selector to the CONTINUITY position.
- (2) Plug the test leads into the measuring terminals.
- (3) Short-circuit the ends of the test leads and make.





- (4) Bring the test leads into contact with both ends of the object being tested. (The buzzer will sound when resistance is below about 100Ω.) This test gives only an approximate result and for a more accurate resistance figure, use the ohmmeter.
  - △ Do not introduce voltage between the test leads.

### 5-9 AC VOLTAGE

- (1) Turn the range selector switch to the AC V position.
- (2) Plug the test leads into the measuring terminals.
- (3) When it is impossible to tell beforehand, even approximately, how

great the voltage will be, select the 520V range.

- (4) Because an segmented scale is used, when less than the rated voltage is measured, the needle will deflect in the reverse direction.
- (5) AC 30V range: Earthing voltage



Fig. 13

#### 5-10 DC VOLTAGE

- (1) Turn the range selector switch to DC V.
- (2) When the user has absolutely no idea at all how great the amount of current may be, start with the 300V (maximum) range, take a reading and then if a lower range is more suitable, select the most suitable range and take an accurate reading.
- (3) Connect the test leads to the measuring terminals.



Fig. 14

## 6. FUSE TYPE CIRCUIT PROTECTION

The resistance and continuity circuits are protected by means of a 1A glass tube-covered fuse. This fuses has been provided to minimize danger due to incorrect use of the tester and even if the fuse blows it is not possible to say that no part of the circuit will be quite unaffected and for this reason the user is urged to make every effort to avoid incorrect operation of the equipment.

## 7. CHANGING BATTERIES AND FUSES

- Unscrew the screw holding the battery case cover on by using a coin or other suitable object.
- (2) Remove the battery holder and put in eight fresh SUM-3 dry cell batteries, noting the markings showing where the ⊕ and ⊖ ends must go.
- (3) The type of fuse used is the Midget 1A 125V housed in a glass

- 42 -



Fig. 15

## 8. HOW TO INSTALL SHOULDER BAND







3124A980-05 92-05-001T 78330025 Printed in Japan

	保	証	昔	
形名	312	4	製造番号	
保証期間	購入日	年	月より	1ヶ年間
				ナしたもので お買い求め先
	ださい。本	書記載内	容で無償修理	理をさせてい
	120120-010100	<b>\</b>          C		00.0
お客様				
<b>お客様</b> ご住所				
				様
ご住所 TEL ご芳名			+ + / 0.7	
ご住所 TEL ご芳名 ※保証書の	) 再発行は ださい。	いたし	ませんので	様、、大切に得
ご住所 TEL ご芳名 ※保証書の 管してく			1	

-----

- 1980 1980

## 保証規定

- 取扱説明書・本体注意ラベルなどの注意事項 にしたがった正常な使用状態で、保証期間内 に故障した場合には、無償修理いたします。
- 2. 保証期間内でも、次の場合には有償修理とな ります。
  - 本書の提示がない場合。
  - (2) 取扱説明書に基づかない不適当な取扱い、 または使用上の誤りによる故障および損傷。
  - (3) 不当な修理や改造による故障および損傷。
  - (4) お買い上げ後の輸送や落とされた場合など による故障および損傷。
  - (5) 外観上の変化(筐体のキズ等)の場合。
  - (6) 火災・公害・異常電圧および地震・雷・風水害その他天災地変など、外部に原因がある故障および損傷。
  - (7) 消耗部品(乾電池等)が損耗し取り換えを 要する場合。
  - (8) その他当社の責任とみなされない故障。
- 本保証書は日本国内のみ有効です。
  This warranty is valid only in Japan.

This wallanty is valid only in Japan.

- ビス内容
······