

	・7.外観上の変化(匡体のキス寺)
ご芳名:	 火災、風水害、地震、落雷、電源異常(電圧、 周波数等)、戦争・暴動行為、放射能汚染および
*お客様へのお願い	その他天災地変等の不可抗力による故障および
保証書の再発行けいたしませんので 士切に	損傷
保管してください。	9. 各種通信・ネットワーク接続による損害
	10. 保証書の提出が無い場合 11. その他弊社の責任とみなされない故障
こ方右」 は芯れ入りますか、お各体にて記入	12. 特殊な用途(宇宙用機器、航空用機器、原子力
していたたきますようお願いいたします。	用機器、生命に関わる医療用機器および車輌制
 取扱説明書・本体注意ラベル(刻印を含む) 	御機器等)に組み込んで使用する場合で、前も
等の注意事項に従った正常な使用状態で保 証期間内に故障した場合には、無償修理い 。	ってその旨を連絡いただかない場合
たします。また、製品のご使用による損失	3. 本保証書は日本国内のみ有効です。
の補償請求に対しては、弊社審議の上購入	(This warranty is valid only in Japan.)
	サービス記録
なお、製造後一定期間を経過したものおよ び部品の生産中止、不測の事態の発生等に	年月日 サービス内容
より修理不可能となった場合は、修理、校	
	日置電機株式会社
	〒 386-1192 長野県上田市小泉 8 1
	TEL 0268-28-0555/ FAX 0268-28-0559 10-09

はじめに このたびは、HIOKI 9669 クランプオンセンサ をご選定いただき、誠にありがと うございます。この製品を十分にご活用いただき、末長くご使用いただくために も、取扱説明書はていねいに扱い、いつも手元に置いてご使用ください。

点検

~~~ かるがお手元に届きましたら、輸送中において異常または破損がないか点検し てからご使用ください。万一、破損あるいは仕様どおり動作しない場合は、お 買上店 ( 代理店 ) か最寄りの営業所にご連絡ください。

#### 使用前の確認

使用前には、保存や輸送による故障がないか、点検と動作確認をしてから使用 してください。故障を確認した場合は、お買上店 ( 代理店 ) か最寄りの営業所 にご連絡ください。

ーブルの被覆が破れたり、金属が露出していないか、使用する前に確認して ください。損傷がある場合は、感電事故になるので、お買上店 (代理店)か最 寄りの営業所にご連絡ください。

### 保守・サービス

- 本器の汚れをとるときは、柔らかい布に水か中性洗剤を少量含ませて、軽く 拭いてください。ペンジン、アルコール、アセトン、エーテル、ケトン、シ ンナー、ガソリン系を含む洗剤は絶対に使用しないでください。変形変色す ることがあります。
   故障と思われるときは、お買上店(代理店)か最寄りの営業所にご連絡ください。 い。輸送中に破損しないように梱包し、故障内容も書き添えてくたさい。輸 送中の破損については保証しかねます。

| 定格一次電流  | AC1000 A                                                                                      |
|---------|-----------------------------------------------------------------------------------------------|
| 出力電圧    | AC0.5 mV/A                                                                                    |
| 振幅確度    | ±1.0% rdg.±0.01%f.s.<br>(f.s. は 1000 A, 45 Hz ~ 66 Hz, コア中心にて)                                |
| 位相確度    | ±1° 以内 (45 Hz ~ 5 kHz)                                                                        |
| 確度保証条件  | 確度保証温湿度範囲 : 23±5℃、80%th 以下(結露しないこと)<br>クランプ開閉回数 : 10,000回まで<br>確度保証期間 : 1年間<br>調整後確度保証期間: 1年間 |
| 振幅周波数特性 | 40 Hz ~ 5 kHz  ±2% 以内(確度からの偏差)                                                                |
| 導体位置の影響 | ±1.5% 以内(中心からの偏差)                                                                             |
| 外部磁界の影響 | 1 A 相当以下(400 A/m の交流磁界において)                                                                   |
| 最大入力電流  | 1000 A rms 連続(使用温湿度範囲内、周波数ディレー<br>ティングによる)                                                    |



| 耐電圧                  | AC 7060 V 1 分間(ケーブル出力端子 - コア間 , ケース - コ<br>ア間)                          |
|----------------------|-------------------------------------------------------------------------|
| 对地間最大定格電             | EEAC 600 V rms 以下                                                       |
| 使用温湿度範囲              | 0℃~50℃, 80%rh 以下(結露しないこと)                                               |
| 保存温湿度範囲              | -10℃~60℃, 80%rh 以下(結露しないこと)                                             |
| 使用場所                 | 高度 2000 m 以下 , 屋内                                                       |
| 適合規格                 | (安全性)EN61010<br>測定カテゴリ Ⅲ, 汚染度 2<br>(予想される過渡過電圧 6000 V)<br>(EMC) EN61326 |
| 測定可能導体径              | ∳55 mm 以下 , 80 × 20 mm ブスバー                                             |
| ケーブル長                | 約3m                                                                     |
| 外形寸法                 | 約 99.5W × 188H × 42D mm (突起物含まず)                                        |
| 質量                   | 約 590 g                                                                 |
| 付属品                  | 取扱説明書                                                                   |
| 製品保証期間               | 1 年間                                                                    |
| <b>f.s.</b> : 最大表示值、 | 目盛長 ( 一般的には、現在使用中のレンジを表します )                                            |

rdg.: 読み値 (現在測定中の値、測定器が現在指示している値を表します)

# 全について

本器を安全にご使用いただくために、また機能を十二分に活用いただくため に、下記の注意事項をお守りください。

### ▲ 危険

この機器は IEC 61010 安全規格に従って、設計され、試験し、安全 な状態で出荷されています。測定方法を間違えると人身事故や機器 の故障につながる可能性があります。取扱説明書を熟読し、十分に 内容を理解してから操作してください。万一事故があっても、弊社 製品が原因である場合以外は責任を負いかねます。

#### 測定カテゴリについて

本器は CAT III に適合しています。 測定器を安全に使用するため、IEC61010 で は測定カテゴリとして、使用する場所により安全レベルの基準をCAT II ~ CAT IVで分類しています。

- CAT II: コンセントに接続する電源 引込み線 コード付き機器(可搬形工 具・家庭用電気製品など)の 一次側電路 コンセント差込口を直接測 CATIV 定する場合は CAT II です。 電力量メータ CAT III: 直接分電盤から電気を取り 固定設備 込む機器(固定設備)の一
  - 次側および分電盤からコン セントまでの電路
- CAT IV: 建造物への引込み電路、引込み口から電力量メータおよび一次側電流 保護装置(分電盤)までの電路

カテゴリの数値の小さいクラスの測定器で、数値の大きいクラスに該当する場所 を測定すると重大な事故につながる恐れがありますので、絶対に避けてください。 カテゴリのない測定器で、CAT II ~ CAT IVの測定カテゴリを測定すると重大な事 故につながる恐れがありますので、絶対に避けてください。

#### 安全記号

| Ŵ       | 使用者は、取扱説明書内の <u>A</u> マークのあるところは、必ず読み<br>注意する必要があることを示します。<br>使用者は、機器上に表示されている <u>A</u> マークのところについ<br>て、取扱説明書の <u>A</u> マークの該当箇所を参照し、機器の操作を<br>してください。 |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | 二重絶縁または強化絶縁で保護されている機器を示します。                                                                                                                            |
| $\sim$  | 交流 (AC) を示します。                                                                                                                                         |
| 4       | 活線状態の電路に着脱できることを示します。                                                                                                                                  |
| 格に関する記号 |                                                                                                                                                        |

欧州共同体閣僚理事会指令(EC 指令)が示す規制に適合してい ることを示します。 CE

取扱説明書の注意事項には、重要度に応じて以下の表記がされています。

- ▲ **危険** 操作や取扱いを誤ると、使用者が死亡または重傷につながる危険性が 極めて高いことを意味します。
- ▲ 警告 操作や取扱いを誤ると、使用者が死亡または重傷につながる可能性が あることを意味します。
- <u>
  Λ 注意</u>操作や取扱いを誤ると、使用者が傷害を負う場合、または機器を損傷 する可能性があることを意味します。
  - 注記 製品性能および操作上でのアドバイス的なことを意味します。

# 使用上の注意

この取扱説明書には本器を安全に操作し、安全な状態に保つのに要する情報や 注意事項が記載されています。本器を使用する前に下記の安全に関する事項を よくお読みください。

### ▲ 危険

- 短絡事故や人身事故を避けるため、本器は AC600 V 以下 の電路で使用してください。
- 本器は、必ずブレーカの二次側に接続してください。ブ レーカの二次側は、万一短絡があっても、ブレーカにて 保護します。一次側は、電流容量が大きく、万一短絡事
- **L**e 故が発生した場合、損傷が大きくなるので、測定しない でください。
  - 感電事故を防ぐため、使用中はバリア(障壁)より先を 触らないでください。

### ▲ 警告

- 本器をぬらしたり、ぬれた手で測定しないでください。 感電事故の原因になります。
- 活線で測定するので、感電事故を防ぐため、労働安全衛生規則に定 められているように、電気用ゴム手袋、電気用ゴム長靴、安全帽等 の絶縁保護具を着用してください。
- 測定範囲を超える電流を長時間入力しないでください。本器を破損 する恐れがあります。

# ▲ 注意

- 直射日光や高温、多湿、結露するような環境下での、保存や使用 はしないでください。変形、絶縁劣化を起こし、仕様を満足しな くなります。
- 本器を落下させたり、衝撃を加えないでください。クランプセン サの突き合わせ面が損傷し、測定に悪影響を及ぼします。
- クランプセンサ先端部に異物等を挟んだり、クランプセンサの隙 間に物を差し込んだりしないでください。センサ特性の悪化、開 閉動作不具合の原因になります。
- クランプセンサ部突き合わせ面にゴミなどが付着した場合は、測 定に影響がでますので、柔らかい布で軽くふき取ってください。
- ケーブル類の被覆に損傷を与えないため、踏んだり挟んだりしな いでください。
- 断線による故障を防ぐため、ケーブルの付け根を折ったり引っ 張ったりしないでください。

#### 注記

<u>川コンセン</u>ト

トランスや大電流路など強磁界の発生している近く、また無線機など強電界の 発生している近くでは、正確な測定ができない場合があります。

# 各部の名称

9669 は電圧出力型クランプセンサです。



# 測定方法

# \land 注意

 $\wedge$ 

- BNC コネクタを引き抜くときは、必ずロックを解除してから、コ ネクタを持って引き抜いてください。ロックを解除せずに無理に 引っ張ったり、ケーブルを持って引っ張るとコネクタ部を破損し ます。
- 接続機器の電源が入った状態または測定導体をクランプした状態 コネクタの抜差しをしないでください。接続機器および本器 の故障の原因になります。

#### 注記

t-t

導体は必ず1本だけクランプしてください。単相(2本)、三相(3本)を同時 にクランプした場合は測定できません。





- 1. BNC コネクタの溝を、接続機器 側のコネクタガイドに合わせて 差し込み、右へ回してロックし ます。
- 2. クランプセンサ部を開き、電流 方向マークの矢印を負荷側に向 けて、導体を1本だけ中央にク ランプします。
- 3. クランプセンサ部が確実に閉じ ていることを確認します。

BNC コネクタを接続機器から 取り外すときは、左に回してか ら、引き抜いてください。

# 9669

**——**ΗΙΟΚΙ

1502EN

# CLAMP ON SENSOR

### Instruction Manual

April 2015 Revised edition 10 Printed in Japan 9669A980-10 15-04H



#### **HEADQUARTERS**

81 Koizumi, Ueda, Nagano 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 os-com@hioki.co.jp www.hioki.com (International Sales Department)

Please visit our website at www.hioki.com for the following:

Regional contact information

- The latest revisions of instruction manuals and manuals in other languages. • Declarations of Conformity for instruments that comply with CE mark
- requirements.

#### Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of one (1) year from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

#### Introduction

Thank you for purchasing the HIOKI 9669 CLAMP ON SENSOR. To obtain maximum performance from the product, please read this manual first, and keep it handy for future reference.

#### Initial Inspection

When you receive the product, inspect it carefully to ensure that no damage occurred during shipping. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

#### **Preliminary Checks**

Before using the product the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative. Before using the product, make sure that the insulation on the cables

is undamaged and that no bare conductors are improperly exposed. Using the product in such conditions could cause an electric shock, so contact your dealer or Hioki representative for repair.

#### Maintenance and Service

- . To clean the product, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.
- If the product seems to be malfunctioning, contact your dealer or Hioki representative.

# **Specifications**

| <b>B</b> ete designment | 4000 4 40                                                           |
|-------------------------|---------------------------------------------------------------------|
| Rated primary current   | 1000 A AC                                                           |
| Output voltage          | 0.5 mV AC/A                                                         |
| Amplitude accuracy      | ±1.0% rdg.±0.01%f.s.<br>(f.s.:1000 A, 45Hz to 66Hz, at core center) |
| Phase accuracy          | Within ±1° (at 45 Hz to 5 kHz)                                      |

| Conditions of guaran-<br>teed accuracy   | Temperature and humidity for guaranteed accuracy<br>: 23±5°C (73±41°F), 80%RH or less (non-condensating)<br>Endurance number of the core opening and closing part<br>: 10,000 times<br>Guaranteed accuracy period: 1 year<br>Guaranteed accuracy period from adjustment made by Hioki<br>: 1 year |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Amplitude frequency characteristics      | Within ±2% at 40 Hz to 5 kHz (deviation from accuracy)                                                                                                                                                                                                                                            |
| Effect of conductor position             | Within ±1.5% (deviation from center)                                                                                                                                                                                                                                                              |
| Effect of external electromagnetic field | 1 A equivalent or less<br>(in an AC electromagnetic field of 400 A/m)                                                                                                                                                                                                                             |
| Maximum input current                    | 1000 A rms continuous (within the operating tempera-<br>ture and humidity, depending on the frequency derating)                                                                                                                                                                                   |



| Temperature coefficien             | t ±0.02%rdg/°C                                                                                                              |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Dielectric strength                | 7060 V AC for 1 minute (between cable output con-<br>nector and core, between core and case)                                |
| Maximum permitted circuit voltage  | 600 V AC rms or less                                                                                                        |
| Operating Temperature<br>&Humidity | 0°C to 50°C (32°F to 122°F), 80%RH or less<br>(non-condensating)                                                            |
| Storage Temperature<br>&Humidity   | -10°C to 60°C (14°F to 140°F), 80%RH or less (non-condensating)                                                             |
| Operating Environment              | t Indoors, <2000m (6562-ft.) ASL                                                                                            |
| Standards applying                 | SafetyEN61010<br>Measurement Category III, Pollution Degree 2<br>(Anticipated Transient Overvoltage: 6000 V)<br>EMC EN61326 |
| Measurable conductor diameter      | φ55 mm (2.17") or less<br>80 X 20 mm, Buss bars                                                                             |
| Cable length                       | Approx. 3 m (118.11")                                                                                                       |
| Size                               | Approx. 99.5W X 188H X 42D mm<br>(3.92W" X 7.4H" X 1.65D") (excluding protrusions)                                          |
| Weight                             | Approx. 590 g (20.8 oz.)                                                                                                    |
| Accessory                          | Instruction Manual                                                                                                          |
| Product warranty period            | 1 year                                                                                                                      |

f.s.: maximum display value or scale length (This is usually the maximum value of the currently selected range.) rdg.: reading value (The value currently being measured and indicated on the measuring product)

# Safety

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

### **A**DANGER

This product is designed to conform to IEC 61010 Safety Standards, and has been thoroughly tested for safety prior to shipment. However, mishandling during use could result in injury or death, as well as damage to the product. Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from product defects.

#### Safety Symbol

| alery Symbol |                                                                                                                                                                                                                                                                                                                                              |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ŵ            | In the manual, the $\triangle$ symbol indicates particularly important information that the user should read before using the product.<br>The $\triangle$ symbol printed on the product indicates that the user should refer to a corresponding topic in the manual (marked with the $\triangle$ symbol) before using the relevant function. |
|              | Indicates a double-insulated device.                                                                                                                                                                                                                                                                                                         |
| ~            | Indicates AC (Alternating Current).                                                                                                                                                                                                                                                                                                          |
| 4            | Indicates that the instrument may be connected to or disconnected from a live circuit.                                                                                                                                                                                                                                                       |

#### Symbols for Various Standards

Indicates that the product conforms to regulations set out by the EC Directive.

The following symbols in this manual indicate the relative importance of cautions and warnings

- **ADANGER** Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.
- MWARNING Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user.
- Indicates that incorrect operation presents a possibility of injury to <u> ACAUTION</u> the user or damage to the product
- Advisory items related to performance or correct operation of the NOTE product

#### **Measurement categories**

This product complies with CAT III safety requirements. To ensure safe operation of measurement products, IEC 61010 establishes safety standards for various electrical environments, categorized as CAT II to CAT IV, and called measurement categories.

CAT II: Primary electrical circuits in equipment connected to an AC electrical outlet by a power cord (portable tools, household appliances, etc.) CAT II covers directly measuring electrical outlet receptacles. CAT III: Primary electrical circuits of heavy equipment (fixed installations) connected directly to the distribution panel, and



feeders from the distribution panel to outlets. CAT IV: The circuit from the service drop to the service entrance, and to the power meter and primary overcurrent protection device (distribution panel)

Using a measurement product in an environment designated with a higher-numbered category than that for which the product is rated could result in a severe accident, and must be carefully avoided. Use of a measurement instrument that is not CAT-rated in CAT II to CAT IV measurement applications could result in a severe accident, and must be care-fully avoided.

# Usage Notes

This manual contains information and warnings essential for safe operation of the product and for maintaining it in safe operating condition. Before using the product, be sure to carefully read the following safety notes.

#### **A** DANGER



- To avoid short circuits and potentially life-threatening hazards, never attach the product to a circuit that operates at more than the 600 V AC.
- This product should only be connected to the secondary side of a breaker, so the breaker can prevent an accident if a short circuit occurs. Connections should never be made to the primary side of a breaker, because unrestricted current flow could cause a serious accident if a short circuit occurs.
- To avoid electric shock, do not touch the portion beyond the protective barrier during use.

### \land WARNING

- To avoid electric shock, do not allow the product to get wet, and do not use it when your hands are wet.
- To avoid electric shock when measuring live lines, wear appropriate protective gear, such as insulated rubber gloves. boots and a safety helmet.
- Note that the product may be damaged if current exceeding the selected measurement range is applied for a long time.

### $\triangle$ CAUTION

- Do not store or use the product where it could be exposed to direct sunlight, high temperature or humidity, or condensation. Under such conditions, the product may be damaged and insulation may deteriorate so that it no longer meets specifications.
- Be careful to avoid dropping the products or otherwise subjecting them to mechanical shock, which could damage the mating surfaces of the clamp jaws and adversely affect measurement.
- Keep the clamp jaws and core slits free from foreign objects, which could interfere with clamping action.
- Measurements are degraded by dirt on the mating surfaces of the clamp jaws, so keep the surfaces clean by gently wiping with a soft cloth.
- Avoid stepping on or pinching the cable, which could damage the cable insulation
- To avoid damaging the cables, do not bend or pull the cables.

#### NOTE

Accurate measurement may be impossible in the presence of strong magnetic fields, such as near transformers and high-current conduc-



tors, or in the presence of strong electromagnetic fields such as near radio transmitters

# Parts Names

The 9669 is a voltage-output-type clamp-on sensor.



# **Measurement Procedures**

### 

- When disconnecting the BNC connector, be sure to release the lock before pulling off the connector. Forcibly pulling the connector without releasing the lock, or pulling on the cable, can damage the connector
- To prevent damage to connected instruments, never connect or disconnect the sensor while the power is on.

#### NOTE

Ŵ

Attach the clamp around only one conductor. Single-phase (2-wire) or three-phase (3-wire) cables clamped together will not produce any reading.







- 1. Engage the BNC connector grooves with the connectorguide projections, and turn the connector clockwise to lock the components.
- 2. Open the clamp jaws and hold only one conductor at the clamp jaws center with the current direction indicator pointing toward the load side
- 3. Make sure the clamp jaws are closed.

To remove the BNC connector, turn the connector counterclockwise and pull it out.

