





1. Confirm that the tester connected to the clamp-on sensor is powered off.
2. Open the terminal cover and connect the cable to the terminal of the 9695-01. Make sure that the polarities match.
3. Connect the cable to the input terminal of the tester.
4. Turn on the tester.
5. If the lever is locked, unlock it.
6. Open the jaw. Orient the current direction indicator to the load side and clamp one conductor at the center of the jaw.
7. Close the jaw and lock it. Be sure to lock the clamp core since it has no spring.