

**CT7631**  
**CT7636**  
**CT7642**

**AC/DC**  
**CURRENT SENSOR**

**Instruction Manual**

**EN**

Nov. 2023 Revised edition 1  
CT7631A961-01



**HIOKI**

[www.hioki.com/](http://www.hioki.com/)



All regional contact information

**HIOKI E.E. CORPORATION**  
81 Koizumi, Ueda, Nagano 386-1192 Japan

2309 EN

Edited and published by HIOKI E.E. CORPORATION

Printed in Japan

•Contents subject to change without notice.  
•This document contains copyrighted content.  
•It is prohibited to copy, reproduce, or modify the content of this document without permission.  
•Company names, product names, etc. mentioned in this document are trademarks or registered trademarks of their respective companies.

**Europe only**  
•EU declaration of conformity can be downloaded from our website.  
•Contact in Europe: HIOKI EUROPE GmbH  
Helfmann-Park 2, 65760 Eschborn, Germany hioki@hioki.eu

**Warranty**

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of three (3) years from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

**Introduction**

Thank you for purchasing the Hioki CT7631, CT7636, CT7642 AC/DC Current Sensor. To obtain maximum performance from the device, please read this manual first, and keep it handy for future reference. Be sure to also read the separate "Current Sensor Operating Precautions" before use.

**The latest edition of the instruction manual**

The contents of this manual are subject to change, for example as a result of product improvements or changes to specifications.

The latest edition can be downloaded from Hioki's website.

<https://www.hioki.com/global/support/download/>



**Product registration**

Register your product in order to receive important product information.

<https://www.hioki.com/global/support/myhioki/registration/>



**Troubleshooting**


If the device seems to be malfunctioning, contact your authorized Hioki distributor or reseller.

**Overview**

This current sensor has a Hioki PL14 output connector, enabling it to be automatically recognized when connected to a compatible instrument for simple setup.

**Parts Names**

Example: CT7636

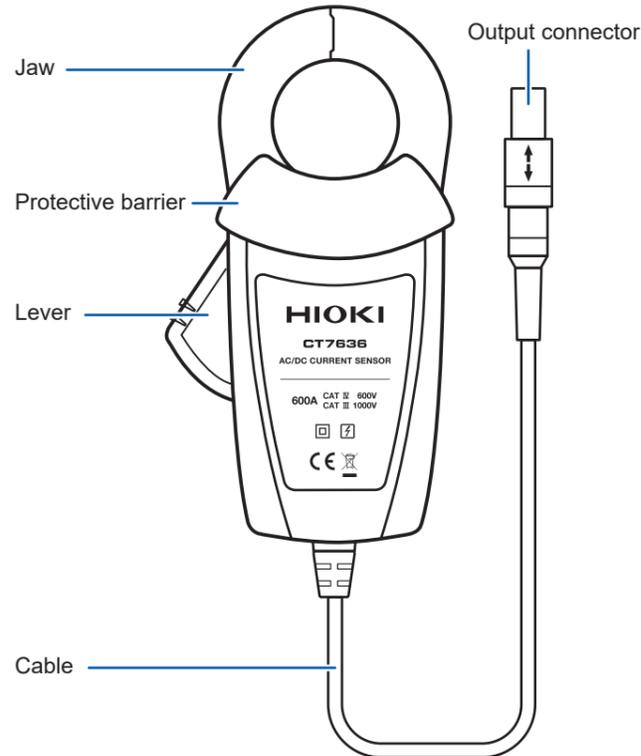

**Serial number (label on rear of device)**

The serial number consists of nine digits. The first two digits indicate the year of manufacture, while the second two digits indicate the month of manufacture. Do not remove this sticker as the number is important.


**Measurement Methods**

**Inspection Before Use**

Verify that the device operates normally to ensure that no damage occurred during storage or shipping. If you find any damage, contact your authorized Hioki distributor or reseller.


Check Items	Remedy
Is the jaw cracked or damaged?	If there is any damage, electric shock may result. Discontinue use and contact your authorized Hioki distributor or reseller.
Is the cable insulation torn?	Discontinue use and contact your authorized Hioki distributor or reseller.
Is the cable broken at the base (of the connector or grip)?	Broken connections will make proper measurement impossible. Discontinue use and contact your authorized Hioki distributor or reseller.

- Attach the clamp around only one conductor. If you clamp single-phase (2-wire) or three-phase (3-wire) conductors together, the device will not be able to make a measurement.

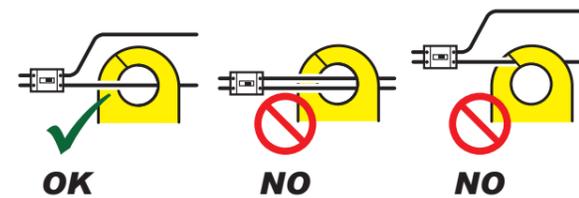

- When a conductor to be measured is clamped in the center of the jaw, measurement is performed the most accurately, with no effect of the conductor position.
- To measure low current levels, multiple windings may be used to increase relative sensitivity (10 windings multiplies the measured current by a factor of 10). However, in this case, the windings should be made radially, with a diameter of at least 20 cm.
- The reading may show a measurement greater than the actual value due to magnetic-field interference. The amount of interference varies depending on the sensor. For details, see "Magnetic-field interference" in Specifications.
- For more information about instrument operation and settings, see the instrument's instruction manual.

**1 Connect the device to the instrument.**

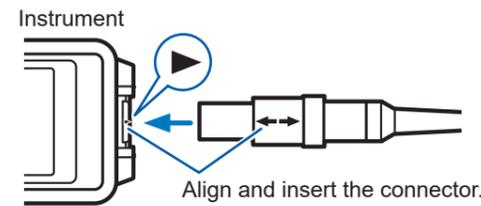


Align the arrow on the device's output connector with the ► on the compatible instrument's sensor input connector and insert the connector.

**2 Perform zero-adjustment. (DC measurement)**

Perform zero-adjustment under no-input conditions.

**3 Clamp the conductor**

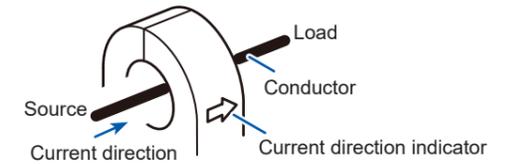

Gripping the lever to open the jaw, align the current direction indicator with the direction of the current in the conductor, and close the jaw with the conductor roughly centered in the jaw.

If the phase is not an issue during AC measurement, the direction of current flow in the wire relative to the current direction indicator may be ignored.

Close the tips of the jaw completely before performing measurement. If the output cable is caught on the jaw or the jaw is forced into the measurement location, it may not close completely. If this occurs, it will not be possible to obtain an accurate measurement.

**4 Once measurement is complete, remove the device from the conductor and disconnect it from the instrument.**

When disconnecting the device from the instrument, grip the tip of the output connector (the part with the arrow) and pull the connector straight out.

Pulling forcibly on the base of the connector may damage the device.

**Specifications**

**General Specifications**

	CT7631	CT7636	CT7642
<b>Operating environment</b>	Indoors, pollution degree 2, altitude up to 2000 m (6562 ft.)		
<b>Operating temperature and humidity</b>	-25°C to 65°C (-13.0°F to 149.0°F), 80% RH or less (no condensation)		
<b>Storage temperature and humidity</b>	-25°C to 65°C (-13.0°F to 149.0°F), 80% RH or less (no condensation)		
<b>Dustproof and waterproof (EN60529)</b>	Jaw, barrier, grip: IP40 (when the jaws closed)	Jaw, barrier: IP50 Grip: IP54 (when measuring an insulated conductor only) Risk of electric shock from the conductor being measured increases when wet.	
<b>Standards</b>	Safety: EN61010 EMC: EN61326		
<b>Dielectric strength</b>	7.4 kV AC for 1 minute (between jaw and grip, between jaw and output connector)		
<b>Power consumption category</b>	Sensor power consumption category: 1 (See the continuous operating time for the instrument to which the device is to be connected.)		
<b>Dimensions</b>	(Not including dimensions of protruding parts, lever, or jaw) Approx. 58W × 132H × 18D mm (2.28"W × 5.20"H × 0.71"D)	Approx. 64W × 160H × 34D mm (2.52"W × 6.30"H × 1.34"D)	Approx. 64W × 195H × 34D mm (2.52"W × 7.68"H × 1.34"D)


	CT7631	CT7636	CT7642
<b>Jaw dimensions</b>	Approx. 66W × 13D mm (2.60"W × 0.51"D)	Approx. 69W × 14D mm (2.72"W × 0.55"D)	Approx. 92W × 18D mm (3.62"W × 0.71"D)
<b>Mass</b>	Approx. 250 g (8.8 oz.)	Approx. 320 g (11.3 oz.)	Approx. 510 g (18.0 oz.)
<b>Cable length</b>	Approx. 2.5 m (98.43")		
<b>Product warranty period</b>	3 years		
<b>Accessories</b>	Instruction Manual, Current Sensor Operating Precautions		

## Output Specifications and Measurement Specifications


### (1) Basic specifications

	CT7631	CT7636	CT7642
<b>Output connector</b>	Hioki PL14		
<b>Rated measurement current</b>	100 AAC/DC	600 AAC/DC	2000 AAC/DC
<b>Output rate</b>	1 mV/A	1 mV/A	0.1 mV/A
<b>Maximum measurement current</b>	RMS value, continuous: see "Frequency deratings" below. Peak value (under the RMS value conditions described above.): 150 A peak    900 A peak    2840 A peak		
<b>Frequency band</b>	DC to 10 kHz (-3 dB)		
<b>Measurable conductor diameter</b>	φ33 mm (φ1.30") or less	φ33 mm (φ1.30") or less	φ55 mm (φ2.17") or less
<b>Maximum rated voltage to earth</b>	600 V AC/DC (Measurement category IV)	1000 V AC/DC (Measurement category III) 600 V AC/DC (Measurement category IV)	Anticipated transient overvoltage: 8000 V


### CT7631 Frequency derating

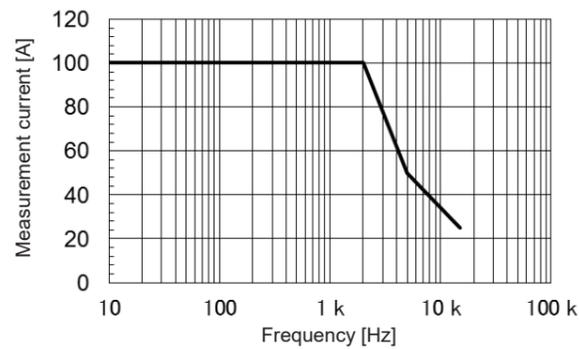

### CT7636 Frequency derating

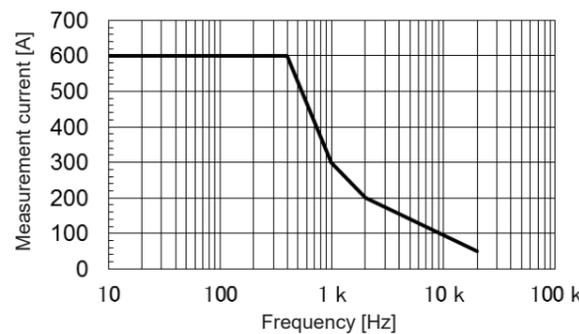

### CT7642 Frequency derating

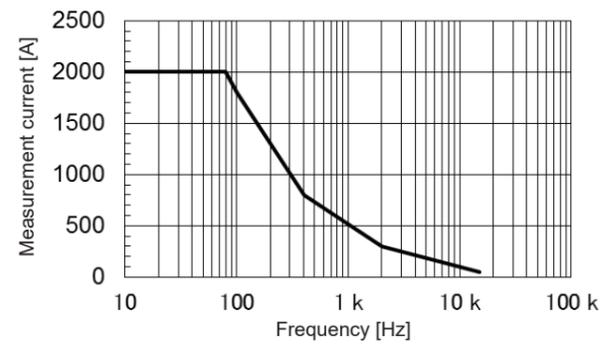

### (2) Accuracy specifications

f.s.: The rated measurement current.

rdg.: The value currently being measured and indicated on the measuring instrument.

	CT7631	CT7636	CT7642
<b>Conditions of guaranteed accuracy</b>	Guaranteed accuracy period: 3 years Opening and closing of the jaw: 30000 times or less Accuracy guarantee for temperature and humidity: 23°C ±5°C (73°F ±9°F), 80% RH or less After performing zero-adjustment with the instrument to which the device is connected Accuracy of AC measurement guaranteed for sine wave inputs		
<b>Measurement accuracy</b>	See separate table.		
<b>Temperature coefficient</b>	In the operating temperature range, add 0.1 × specified accuracy/°C (at temperatures other than 23°C ±5°C).		
<b>Effect of radiated radio-frequency electromagnetic field</b>	15% f.s. at 10 V/m		
<b>Effect of conducted radio-frequency electromagnetic field</b>	10% f.s. at 3 V		
<b>Effect of conductor position (deviation from center)</b>	Within ±1.5%	Within ±2.0%	Within ±1.0%
<b>Effect of external magnetic field (400 A/m, DC)</b>	Within ±1.5% f.s.	Within ±0.5% f.s.	Within ±0.2% f.s.
<b>Maximum cord extension length</b>	100 m (Depends on the instrument to which the device is to be connected.)		

### CT7631 Measurement accuracy

Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 500 (Hz)
Amplitude (A)			
I ≤ 80	±1.0% rdg. ±0.5% f.s.	±1.0% rdg. ±0.5% f.s.	±2.0% rdg. ±0.5% f.s.
80 < I ≤ 100			±2.5% rdg. ±0.5% f.s.
Peak (A peak)			
I peak  ≤ 110	±1.0% rdg.	±1.0% rdg.	±2.0% rdg. ±2% f.s.
110 <  I peak  ≤ 150	±2% f.s.	±2% f.s.	±2.5% rdg. ±2% f.s.
Phase	-	±1.8 deg.	DC < f < 45 (Hz): ±1.8 deg. 66 < f ≤ 500 (Hz): Not defined.

### CT7636 Measurement accuracy

Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 1 k (Hz)
Amplitude (A)			
	±2.0% rdg. ±0.5% f.s.	±2.0% rdg. ±0.5% f.s.	±3.0% rdg. ±0.5% f.s.
Peak (A peak)			
I peak  ≤ 600	±2.0% rdg. ±0.7% f.s.	±2.0% rdg. ±0.7% f.s.	±3.0% rdg. ±0.7% f.s.
600 <  I peak  ≤ 900	±4.0% rdg. ±0.7% f.s.	±4.0% rdg. ±0.7% f.s.	±5.0% rdg. ±0.7% f.s.
Phase	-	±1.8 deg.	DC < f < 45 (Hz): ±1.8 deg. 66 < f ≤ 1 k (Hz): Not defined.

### CT7642 Measurement accuracy

Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 1 k (Hz)
Amplitude (A)			
I ≤ 1800	±1.5% rdg. ±0.5% f.s.	±1.5% rdg. ±0.5% f.s.	±2.5% rdg. ±1.0% f.s.
1800 < I ≤ 2000			±2.0% rdg. ±0.5% f.s.
Peak (A peak)			
I peak  ≤ 2300	±1.5% rdg. ±1.0% f.s.	±1.5% rdg. ±1.0% f.s.	±2.5% rdg. ±1.0% f.s.
2300 <  I peak  ≤ 2840	±6.0% rdg. ±1.5% f.s.	±6.0% rdg. ±1.5% f.s.	±7.0% rdg. ±1.5% f.s.
Phase	-	±2.3 deg.	DC < f < 45 (Hz): ±2.3 deg. 66 < f ≤ 1 k (Hz): Not defined.


"Peak input" is only available in conjunction with the CM7290 Display Unit. For more information about the combination accuracy with the instrument, see the instrument's instruction manual.

Amplitude accuracy design value is DC < f < 5 Hz. Phase accuracy design value is DC < f < 10 Hz.


## Zero-point Temperature Characteristics

Hall elements are subject to individual variation, and it is not possible to specify the magnitude or tendency of that variation. When using the sensor in an operating environment characterized by large temperature variations, it is recommended to observe variation in the zero-point under no-input conditions. Zero-point variation affects DC offset by not AC mode operation. Reference examples are provided below to illustrate zero-point variation (23°C reference) relative to temperature variations for each sensor. (There is also a significant level of variation in characteristics among individual products.) The operating temperature range is -25°C to 65°C (-13°F to 149°F). (See below for example characteristics.)

### CT7631

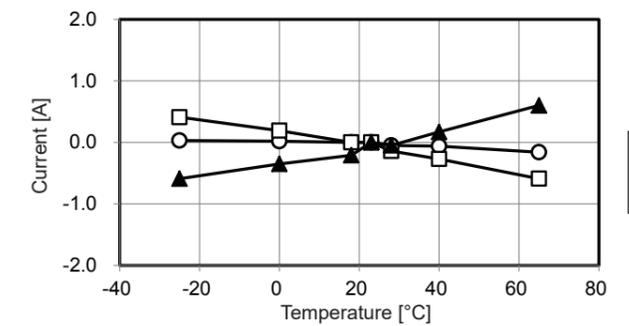

### CT7636

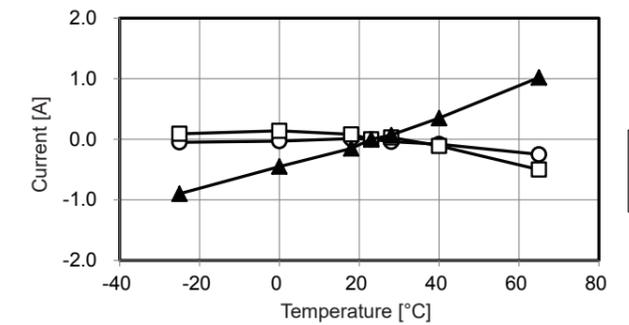

### CT7642

