

Oct. 2024 Revised edition 7 9465E980-07

600125537

ΗΙΟΚΙ

www.hioki.co.jp/

本社 〒386-1192 長野県上田市小泉 81

製品	¦ወ	お	問	い	合わせ		
\sim			0	0	70	0	~

0120-7	2-0560	9:00 ~ 12:00, 13:00 ~ 17:00 土・日・祝日を除く
TEL 0268-28-0560	FAX 0268-28-0569	info@hioki.co.jp

修理・校正のお問い合わせ

ご依頼はお買上店(代理店)または最寄りの営業拠点まで お問い合わせはサービス窓口まで TEL 0268-28-1688 cs-info@hioki.co.jp

編集・発行 日置電機株式会社

- ・CE 適合宣言は弊社ウェブサイトからダウンロードできます。
- ・本書の記載内容を予告なく変更することがあります。
- ・本書には著作権により保護される内容が含まれます。 ・本書の内容を無断で転記・複製・改変することを禁止します。
- ・本書に記載されている会社名・商品名などは、各社の商標または登録商標です。

はじめに

このたびは、HIOKI 9465-10, 9465-11 ピン形リードをご選定いただき、誠 にありがとうございます。この製品を十分にご活用いただき、末長くご使用 いただくためにも、取扱説明書はていねいに扱い、大切に保管してください。

取扱説明書の最新版

取扱説明書の内容は、改善・仕様変更などのために変更する 場合があります。 品、資 最新版は、弊社ウェブサイトからダウンロードできます。 https://www.hioki.co.jp/jp/support/download/

概要

9465-10,9465-11 ピン形リードは、非常用バッテリーのメンテナンス、 EVメンテナンスの等電位試験など、測定対象への接触が困難な狭い環境に も使用できる4端子構造のピン形リードです。

外径最大2.9 mmの同軸ピンを採用することで、バッテリー端子カバーに開 けられた検査用の穴を利用して測定ができます。



点検

本器がお手元に届きましたら、異常または損傷が輸送中に発生していないか 点検してからご使用ください。万一、破損がある場合または仕様どおりに動 作しない場合は、お買上店(代理店)か最寄りの営業拠点にご連絡ください。

保守・サービス

- 本器の汚れをとるときは、柔らかい布に水か中性洗剤を少量含ませて、軽 く拭いてください。ベンジン、アルコール、アセトン、エーテル、ケトン、 シンナー、ガソリン系を含む洗剤は絶対に使用しないでください。変形、 変色することがあります。
- ・故障と思われるときは、お買上店(代理店)か最寄りの営業拠点にお問い合 わせください。
- 輸送中に破損しないように梱包し、故障内容も書き添えてください。輸送 中の破損については保証しかねます。

安全について

この取扱説明書には本器を安全に操作し、安全な状態に保つのに要する情報 や注意事項が記載されています。本器を使用する前に次の安全に関する事項 をよくお読みください。

<u>/</u>危険

この機器は測定方法を間違えると人身事故や機器の故障につながる可 能性があります。取扱説明書を熟読し、十分に内容を理解してから操 作してください。万一事故があっても、弊社製品が原因である場合以 外は責任を負いかねます。

安全記号

	使用者は、取扱説明書内の <u>(A</u> マークのあるところは、必 ず読み注意する必要があることを示します。		
取扱説明書の注意事項には、重要度に応じて以下の表記がされています。			
<u> </u> 危険	操作や取り扱いを誤ると、使用者が死亡または重傷につ ながる危険性が極めて高いことを意味します。		
⚠注意	操作や取り扱いを誤ると、使用者が傷害を負う場合、ま たは機器を損傷する可能性があることを意味します。		
重要	操作および保守作業上、特に知っておかなければならな い情報や内容がある場合に記述します。		

ご使用にあたっての注意

本器を安全にご使用いただくために、また機能を十分にご活用いただくため に、次の注意事項をお守りください。

/ 1. 危険

- 感電事故を防ぐため、本器の先端で電圧のかかっているラインを 短絡しないでください。
- \bigcirc 本器の定格および仕様の範囲外で使用しないでください。本器の 破損により、人身事故に至るおそれがあります。
- 感電、短絡事故を避けるため、本器を接続する前に各機器の電源 を切ってください。

⚠注意

- 断線による故障を防ぐため、本器の付け根を折ったり、引っ張っ \bigcirc たりしないでください。
- 本器の損傷を防ぐため、運搬および取り扱いの際は振動、衝撃を 避けてください。特に、落下などによる衝撃に注意してください。
- 本器の先端はとがっているため危険です。けがのないよう、取り 扱いには十分注意してください。使用しないときは保護キャップ <u>を取り付けて</u>ください。

9465-10,9465-11 ピン形リードを斜め に当てながら力を加えないでください。

使用方法

使用前の確認

保存や輸送による故障がないか本器を点検し、動作確認をしてから使用して ください。故障を確認した場合は、お買上店(代理店)か最寄りの営業拠点 にご連絡ください。

点検箇所としては、ピンの動作、先ピンやケーブルロックの緩みなどがあり ます。ケーブルロックなどが緩んでいた場合には故障の原因となりますので、 増し締めしてから使用してください。

<u>∧</u>危険

- 本器を使用する前に、リード線の被覆が破れたり金属が露出したりし ていないか確認してください。損傷がある場合は、感電事故になるの
- で、お買上店(代理店)か最寄りの営業拠点にご連絡ください。

1 接続機器の電源が切れていることを確認する 2 接続機器の入力端子に本器を接続する

本器の赤▲マークと接続機器の赤▲マーク、 本器の黒▲マークと接続機器の黒▲マークを 合わせて接続してください。



3 ゼロアジャストを実行する

必ず9454またはZ5038 ゼロアジャストボードを使用してください。 詳細については、接続機器の取扱説明書をご覧ください。



4 測定対象に本器を接続する

使用しないときは保護キャップを取り付けてください。

重要

4端子測定における測定値について(測定リードによる測定値の違い) 鉛蓄電池の測定など測定対象によっては、使用する測定リードにより測定 値に差が発生します。この測定値の違いは使用する4端子測定リードの先 端形状や寸法に起因するもので、どのリードを使った測定値もそのリード に対する真値となります。バッテリーの劣化を抵抗値経時変化で判断する 場合は、同じ寸法形状の測定リードを使用してください。 参考例(制御弁式据置鉛蓄電池"MSE-200"を測定)

* 抵抗値は測定対象の端子材質や構造により違います。

測定リード (電流印加ピンと電圧計測ピンの距離)	BT3554 バッテリテス 夕での測定値
9465-10, 9465-11 ピン形リード (0.65 mm)	0.538 mΩ
9772 ピン形リード (2.5 mm)	0.490 mΩ
	テスタの取扱説明書をご

アスタの取扱説明書を 覧ください。

解説

測定値の違いは、使用する測定リードの電流印加ピンと電圧計測ピンの距 離(寸法)に違いがあることから起こる物理現象です。バッテリー端子部 分の抵抗がバッテリーの内部抵抗に比べて相対的に大きいほど顕著に現れ ます。下図は鉛蓄電池を測定した場合の模式図でピン間隔の違いにより検 出電圧に差が発生することを示しています。



仕様

NO 🖉

ΟΚ

対地間最大定格電圧	AC 30 V rms、AC 42.4 V peak、DC 60 V		
定格電流	AC/DC 2 A 連続		
使用温湿度範囲	0℃~40℃、80% RH以下(結露しないこと)		
保存温湿度範囲	–10℃~50℃、80% RH以下(結露しないこと)		
使用場所	屋内、高度2000m以下		
長さ	9465-10:約1900 mm、9465-11:約3900 mm		
質量	9465-10:約180 g、9465-11:約200 g		







2103 JA

国内拠点



既知の測定対象を測定し、抵抗値が正確であるか確認してから使用し てください。

9465-10 9465-11

PIN TYPE LEAD

Instruction Manual

Oct. 2024 Revised edition 7 9465F980-07

ΗΙΟΚΙ

www.hioki.com

HIOKI E.E. CORPORATION 81 Koizumi, Ueda, Nagano 386-1192 Japan

Edited and published by HIOKI E.E. CORPORATION

·Contents subject to change without notice. ·This document contains copyrighted content.

· It is prohibited to copy, reproduce, or modify the content of this document without permission.

registered trademarks of their respective companies

·Contact in Europe:

Helfmann-Park 2, 65760 Eschborn, Germany hioki@hioki.eu

Thank you for choosing the Hioki 9465-10/9465-11 Pin Type Lead. To ensure your ability to get the most out of this product over the long term, please read this manual carefully and keep it available for future reference.

The latest edition of the instruction manual

The contents of this manual are subject to change, for example as a result of product improvements or changes to specifications. The latest edition can be downloaded from Hioki's website

https://www.hioki.com/global/support/download/

Overview

The 9465-10/9465-11 Pin Type Lead is a four-terminal pin-type lead assembly that can be used for various maintenance works, including that of emergency batteries and electric vehicles (EV) involving equipotential tests, that require its pins to be brought into contact with difficult-to-access objects to be measured

Use of the coaxial pin with a maximum outside diameter of 2.9 mm allows you to perform measurement using a hole for inspection made on a battery connector cover

Inspection and Maintenance

Initial Inspection

When you open the package, carefully inspect the product to ensure that everything is in good condition, and that no damage occurred during shipping. If the product seems to have been damaged or does not work as specified, contact your authorized Hioki distributor or reseller

Maintenance and Service

- · To clean the product, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.
- · If the product seems to be malfunctioning, contact your authorized Hioki distributor or reseller.

• Pack the product so that it will not sustain damage during shipping, and include a description of existing damage. We cannot accept responsibility for damage incurred during shipping

Safety Information

This manual contains information and warnings essential for safe operation of the product and for maintaining it in safe operating condition. Before using it, be sure to carefully read the following safety precautions

DANGER

Mishandling this product during use could result in injury or death, as well as damage to the product. Be certain that

you understand the instructions and precautions in the 0 manual before use. Hioki disclaims any responsibility for accidents or injuries not resulting directly from product defects

Safety Symbol



In this manual, the A symbol indicates particularly important information that the user should read before using the product.

The following symbols in this manual indicate the relative importance of cautions and warnings.

DANGER Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.

Indicates that incorrect operation presents a possibility of **CAUTION** injury to the user or damage to the product.

Indicates information or content that is particularly **IMPORTANT** important from the standpoint of operating or maintaining the product.

Precautions for Use

Observe the following precautionary information to ensure that the product can be used safely and in a manner that allows it to perform as described in its specifications

DANGER

- · To prevent an electric shock, be careful to avoid shorting live lines with the pin type leads tip.
- Do not use the product to measure circuits that exceed its ratings or specifications. Damage to the product or overheating can cause bodily injury.
- To prevent an electric shock and short-circuit, turn off all 0 power before connecting leads.

CAUTION

- To avoid breaking the leads, do not bend or pull them.
- To avoid damage to the product, protect it from physical shock when transporting and handling. Be especially careful to avoid physical shock from dropping.
- The ends of the leads are sharp. Be careful to avoid injury. Attach the protective sleeves when the product is not in use

To avoid damage, do not contact the 9465-10/9465-11 Pin Type Lead tip against the object under measurement at a tilted angle.



Procedure

Preliminary Checks

Check the product for any damage that may have occurred during storage or shipping, and perform functional checks before use. If you find any damage to the product, please contact your authorized Hioki distributor or reseller for repair

Points to check include the pin operation and whether the pin and cable lock are loose. As loose screwing of the cable lock and other components can result in damage, be sure to tighten them securely before use.

/ DANGER

Confirm that the insulation on the using the test leads are undamaged and that no bare conductors are improperly exposed before use. If you find any damage to the product that leads to an electric shock, please contact your authorized Hioki distributor or reseller for repair.

- Make sure the device to which connect the pin type lead is powered
- 2 Connect the pin type lead to the input terminal of the device

Plug the \blacktriangle mark on the red lead into the red \blacktriangle marked jack on the device, and plug the **A** mark on the black lead into the black **A** marked jack on the device.



3 Perform zero adjustment.

Be sure to use the 9454 Zero Adjustment Board or the Z5038 0 ADJ Board. See the instruction manual for details of connectable devices



4 Connect the 9465-10/9465-11 to an object under measurement. Attach the protective sleeves when not in use.

IMPORTANT

Measurement values when using four-terminal measurement (Differences in measurement values due to measurement leads used) Depending on the object under measurement, such as a lead-acid battery, measurement values may vary due to the measurement lead used. Since these differences in measurement values are due to the shapes and dimensions of the leads used in four-terminal measurement, measurement values taken using any lead represent the true values for that lead only. When judging battery wear using changes in resistance values with time, be sure to use measurement leads having the same dimensions. Reference example (measurement of an MSE-200 valve-regulated stationary lead-acid battery)

Note: Resistance values vary according to the materials and structure of the terminals of the object under measurement.

Measurement lead (Distance between the current-impression pin and the voltage measurement pin)	Measurement values using the BT3554 Battery Tester
9465-10/9465-11 Pin Type Lead (0.65 mm)	0.538 mΩ
9772 Pin Type Lead (2.5 mm)	0.490 mΩ

See the BT3554 Battery Tester manual for detailed technical descriptions

Explanation

Differences in measurement values are physical phenomena resulting from differences in the distances (dimensions) between current-impression pins and voltage-measurement pins. The greater the battery terminal resistance in comparison to the battery's internal resistance, the more marked these differences become. The following diagram shows how differences in voltage detected result from differences in distance when measuring a lead-acid battery



Specifications

Maximum rated line-to- ground voltage	30 V AC rms, 42.4 V AC peak, 60 V DC
Rated current	2 A AC/DC continuous
Operating temperature and humidity range	0°C to 40°C (32°F to 104°F), 80% RH or less (non-condensing)

Printed in Japan

All regional contact

nformation

2402 EN

·Company names, product names, etc. mentioned in this document are trademarks or

Europe only

•EU declaration of conformity can be downloaded from our website.

HIOKI EUROPE GmbH

Introduction



