


Temperature/Humidity Control during Cargo Transportation

Record the temperature/humidity during transportation and control changes in the temperature/humidity of the precious cargo

■ Highlights

- Put the LR5001 Temperature/Humidity Logger into the cargo package to be transported.
- The measurement data can be transferred to a PC and displayed in graph format. (An LR5091 Communication Adapter or LR5092-20 Data Collector is required for data transfer.)
- The measurement data can be displayed in graph format at the transportation destination to understand the changes in the temperature/humidity of the cargo during transportation.
- Also check the maximum/minimum temperatures from the start of the recording right on the screen of the LR5001.
- The compact logger can even be placed in a small cargo package.

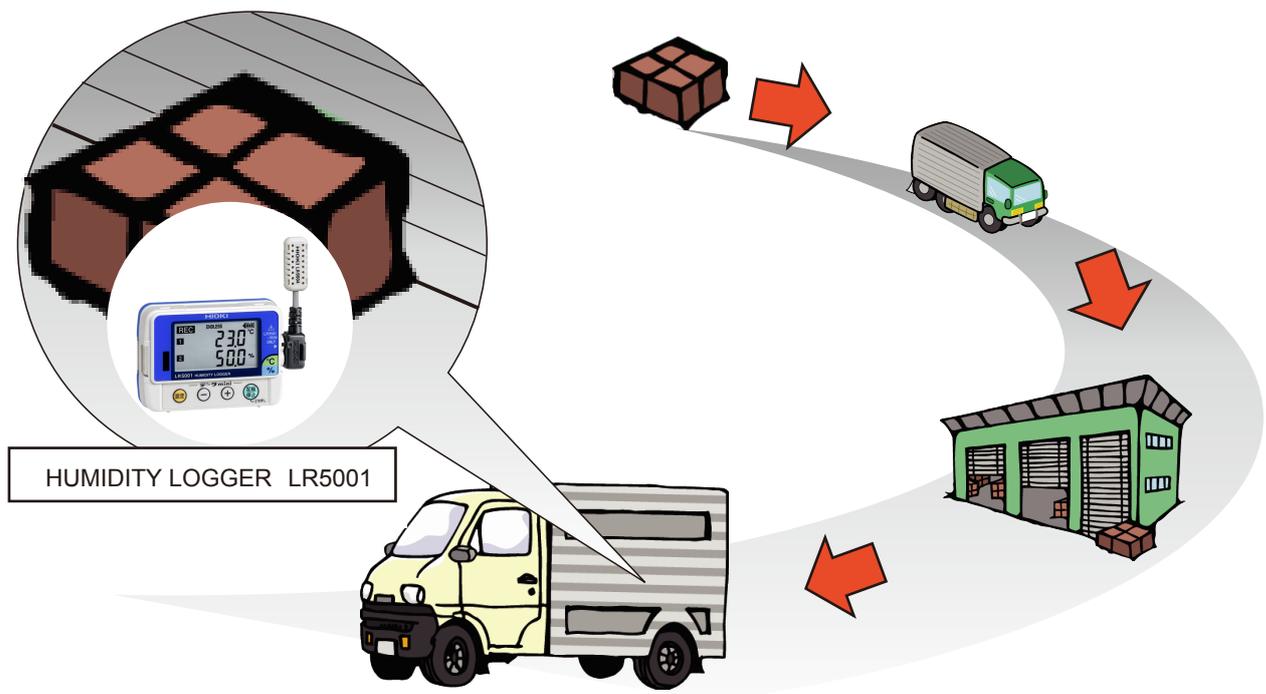

Products used

- HUMIDITY LOGGER LR5001
- COMMUNICATION ADAPTER LR5091
or
- DATA COLLECTOR LR5092-20