


# Measure the Insulation Resistance of Electric Vehicles

Measure insulation resistance for the maintenance of electric vehicles (EVs) and hybrid electric vehicles (HEVs).

## ■ Highlights

- Measure electrical insulation to prevent electric shock accidents during the maintenance of electric and hybrid vehicles.

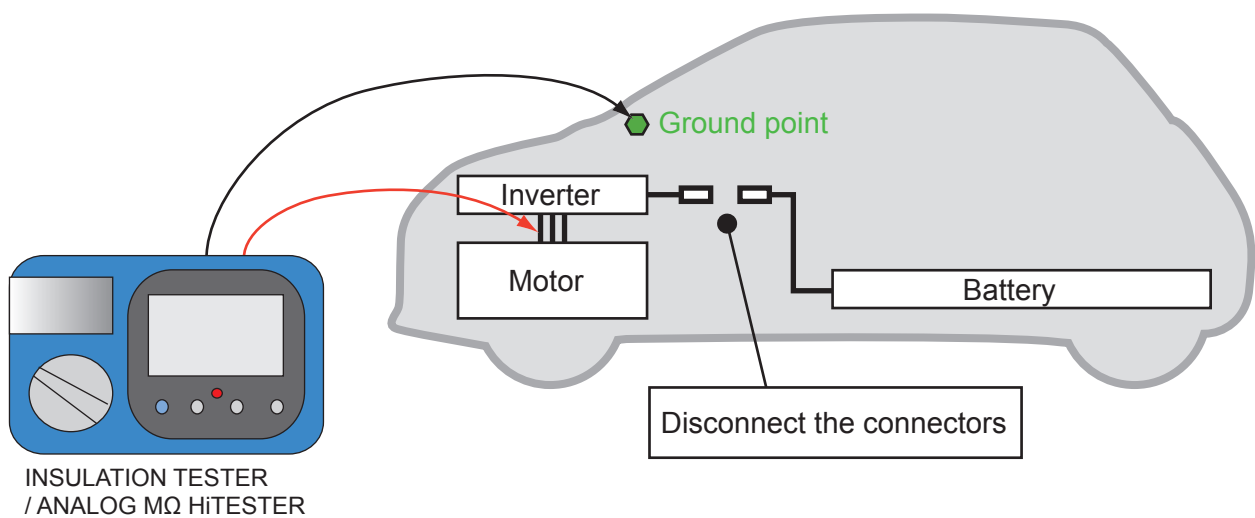

## ■ How to use

1. Disconnect the connectors of the battery and inverter.  
Insulation resistance cannot be measured under high pressure.
2. Connect the negative terminal of the insulation resistance tester to the ground point of the car body.
3. Connect the positive terminal to each motor phase terminal.
4. Measure the insulation resistance at a test voltage of 500 V (which varies depending on the battery voltage).

\*The measurement method varies depending on the vehicle type.  
For details, refer to the service manual.

## Products used



IR4057-20

- ANALOG MΩ HiTESTER IR4017-20 (500V)
- INSULATION TESTER IR4057-20 (50V/125V/250V/500V/1000V)
- INSULATION TESTER IR4056-20 (50V/125V/250V/500V/1000V)