

1 Panel loading times

The following tables list response times when using the panel load function to load previously saved measurement conditions and correction values. (These values are provided for reference purposes only and do not constitute a guarantee of instrument performance.)

-1 IM35xx series

| Model | LCR mode | | | ANALYZER mode | | |
|-----------|----------------------------------------------|------------------------|-------------------|----------------------------------------------|------------------------|-------------------|
| | Measurement conditions and correction values | Measurement conditions | Correction values | Measurement conditions and correction values | Measurement conditions | Correction values |
| IM3523 | 10ms | 9ms | 4ms | — | — | — |
| IM3533 | 10ms | 9ms | 4ms | — | — | — |
| IM3533-01 | 10ms | 9ms | 4ms | 80ms | 60ms | 6ms |
| IM3536 | 6. 5ms | 5ms | 1. 5ms | — | — | — |
| IM3570 | 12ms | 9ms | 4ms | 120ms | 120ms | 8ms |
| IM3590 | 10ms | 9ms | 4ms | 80ms | 60ms | 6ms |

-2 IM75xx series

| Model | LCR mode | ANALYZER mode |
|---------|----------|---------------|
| IM7580A | 1. 4ms | 35ms |
| IM7581 | 1. 4ms | 35ms |
| IM7583 | 1. 4ms | 35ms |
| IM7585 | 1. 4ms | 35ms |
| IM7587 | 1. 4ms | 35ms |

Note: Indicated times indicate loading of measurement conditions and correction values.