

1. はじめに

このたびは、HIOKI“ 9 5 5 9 プリントカード ”をご選
定いただき、誠にありがとうございます。この製品を
十分にご活用いただき、末長くご使用いただくため
にも、取扱説明書はていねいに扱い、いつも手元に置い
てご使用ください。

2. 概要

9 5 5 9 プリントカードを使用することにより、外部
プリンタでカラー、またはモノクロにて A4 サイズの
用紙にプリントができます。
PRINT キー：波形データ、または数値データをプリント
COPY キー：画面のハードコピーをプリント
外部プリンタの使い方については、メモリレコーダ本
体の取扱説明書を参照してください。

3. ご使用にあたっての注意

本器を正しく安全に使用し、操作していただくために、
下記の注意事項を必ずお守りください。

PC カード本体および接合部の破損や接触
不良をさけるため、下記注意事項をお守り
ください。


- ① PC カードを所定の方向および手順以
外の方法で挿入しないでください。
- ② 接続ケーブルまたはケーブルのコネ
クタを持って PC カードを挿入しな
いください。
- ③ 接続ケーブルのコネクタを接続した
まま、本体を移動しないでください。
- ④ 接続ケーブルのコネクタを無理に引
っ張るなどして、PC カードの接合部
に力をかけないでください。
- ⑤ 接続ケーブルのコネクタ上に、物を置
かないでください。

警告

本器を輸送する場合は、最初にお届けし
た梱包材料をご使用ください。

4. 本体との接続方法

- PC カードの取付方法
- (1) PC カードプロテクタを下図のように接続ケーブル
に通します。
- (2) 接続ケーブルの PC カード側のコネクタと PC カー
ド本体を接続してください。
コネクタの表面 (▲印のある面) と PC カードの表
面を合わせ接続します。

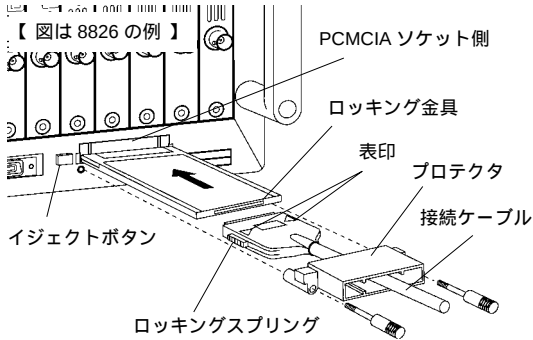

- (3) 本体の PC カードスロットに PC カードを挿入して
ください。PC カードの▲印の向きにしたがって、
PC カードスロットに確実に差し込んでください。
PC カードには誤挿入防止キーが付いていますが、
無理に差し込むと PC カードスロットや PC カード
の故障の原因になります。
- (4) PC カードプロテクタを本体に取り付けます。


- PC カードの取外方法
- (1) PC カードプロテクタを外します。
- (2) PC カードを取り外すときは、イジェクトボタンを
押して、PC カードを取り出してください。

PC カードプロテクタを外す前にイジェ
クトボタンを押さないでください。本器
が故障する場合があります。

5. 仕 様

準拠規格	PC Card Standard および IEEE1284 パラ レルポート
対応コントローラ	ESC/P、ESC/P ラスタ
対応機種	8826 (Ver1.00 以降)、8835 (Ver2.00 以降) 8841、8842 (Ver1.00 以降)
接続ケーブル長	150 cm
コネクタ形式	セントロニクス 36 ピン (メス)
カード外形寸法	TYPE II、54(W)×85(H)×5(D)mm
付属品	プリンタ接続ケーブル、取扱説明書

■ コネクタ仕様

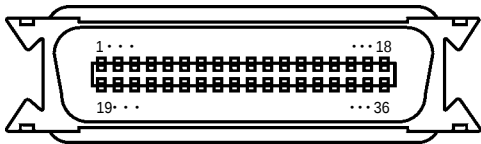

ピン	信号名	I/O	ピン	信号名	I/O
1	STB-	0	19	GND	-
2	PD0	I/O	20	GND	-
3	PD1	I/O	21	GND	-
4	PD2	I/O	22	GND	-
5	PD3	I/O	23	GND	-
6	PD4	I/O	24	GND	-
7	PD5	I/O	25	GND	-
8	PD6	I/O	26	GND	-
9	PD7	I/O	27	GND	-
10	ACK-	I	28	GND	-
11	BUSY	I	29	GND	-
12	PE	I	30	GND	-
13	SLCT	I	31	INIT-	0
14	AFD-	0	32	ERR-	I
15	NC	-	33	GND	-
16	NC	-	34	NC	-
17	NC	-	35	NC	-
18	NC	-	36	SLIN-	I

HIOKI

日置電機株式会社

本 社 TEL0268-28-0555 FAX0268-28-0559
〒386-1192 上 田 市 小 泉 8 1

東北 (営) TEL022-288-1931 FAX022-288-1934
〒984-0011 仙台市若林区六丁の目黒町 8-1

長野 (営) TEL0268-28-0561 FAX0268-28-0569
〒386-1192 上 田 市 小 泉 8 1

東京 (営) TEL048-267-7234 FAX048-261-5790
〒333-0847 川 口 市 芝 中 田 2-3-2 4

北関東 (営) TEL048-266-8161 FAX048-269-3842
〒333-0847 川 口 市 芝 中 田 2-3-2 4

神奈川 (営) TEL0462-24-8211 FAX0462-24-8992
〒243-0016 厚 木 市 田 村 町 8-8

静岡 (営) TEL054-254-4198 FAX054-254-3180
〒420-0054 静岡市東区南 1-3-1 0


名古屋 (営) TEL052-702-6807 FAX052-702-6943
〒465-0081 名古屋市中区高岡町 2 2

大阪 (営) TEL 06-871-0088 FAX 06-871-0025
〒565-0085 豊 中 市 上 新 田 2-1-3 7

広島 (営) TEL082-879-2251 FAX082-879-2253
〒731-0122 広島市安佐南区第 3-2-8-1 3

福岡 (営) TEL092-482-3271 FAX092-482-3275
〒812-0006 福岡市博多区上牟田 3-8-1 9

お問い合わせは最寄りの営業所または本社販売支援課まで。
(TEL 0268-28-0560 FAX 0268-28-0579 E-mail: info@hioki.co.jp)
9559A980-03 98-09-0001H Printed in Japan



HIOKI

9 5 5 9

PRINTER CARD

Instruction Manual

September 1998 Revised edition 3

HIOKI

保 証 書

形名	製造番号	保証期間
9 5 5 9		購入日 年 月より1年間

この製品は、弊社の厳密なる検査を経てお届けしたものです。万一ご使用中
に故障が発生した場合は、お買い求め先に依頼してください。本書記載内容
で無償修理をさせていただきます。依頼の際は、本書を提示してください。

お客様 ご住所 〒 〇〇〇〇〇〇
ご芳名 〇〇〇〇〇〇 TEL 〇〇〇〇〇〇

* 保証書の再発行はいたしませんので、大切に保管してください。

保証規定

1. 取扱説明書・本体注意ラベルなどの注意事項にしたがった正常な使用状
態で保証期間内に故障した場合には、無償修理いたします。

2. 保証期間内でも、次の場合には有償修理となります。

- 1 本書の提示がない場合。
- 2 取扱説明書に基づかない不適当な取扱い、または使用上の誤りによる
故障および損傷。
- 3 不当な修理や改造による故障および損傷。
- 4 お買い上げ後の輸送や落とされた場合などによる故障および損傷。
- 5 外観上の変化 (筐体のキズ等) の場合。
- 6 火災・公害・異常電圧および地震・雷・風水害その他天災地変など、
外部に原因がある故障および損傷。
- 7 消耗部品 (乾電池等) が消耗し取換えを要する場合。
- 8 その他弊社の責任とみなされない故障。

3. 本保証書は日本国内のみ有効です。
(This warranty is valid only in Japan.)

— サービス記録 —

年月日	サービス内容

日置電機株式会社
〒 386-1192 上田市小泉 8 1
TEL 0268-28-0555
FAX 0268-28-0559

1. Introduction

Thank you for purchasing this HIOKI "9559 PRINTER CARD."

To get the maximum performance from the unit, please read this manual first, and keep this at hand.

2. Outline

Using the 9559 PRINTER CARD, waveform data can be output on A4-size sheets from the external printer in color or monochrome.
PRINT key: Prints out equivalent to waveform data or numerical data.
COPY key: Prints out the screen hard copy.

3. Notes on Use

In order to ensure safe operation and to obtain maximum performance from the unit, observe the cautions listed below.



If a PC card is inserted upside down, backwards, or in the wrong direction, the PC card or the unit may suffer damage. To avoid damage to the PC card or connector, observe the cautions listed below.


- ❶ Inserting the card with the wrong orientation or in other ways than described above.
- ❷ Inserting the card while attached to the connection cable.
- ❸ Moving the unit while the connection cable is connected to the card.
- ❹ Pulling the card out by the cable or exerting excessive force on the connector.
- ❺ Placing objects on the connection cable connector.

NOTE If reshipping the unit, preferably use the original packing.

4. Using the PC Card Slot

■ Cable and PC card connection

- (1) Pass the PC card protector through the connection cable, as shown below.
- (2) Plug the PC card end of the connection cable into the PC card. The top side of the cable connector (marked with a ▲) should match the top side of the PC card, as shown below.
- (3) Insert the PC card in the PC card slot on the unit. Verify that the ▲ mark on the card points in the correct direction as shown below, and make sure that the card is properly seated in the slot. The PC card is keyed to prevent wrong insertion, but exerting excessive force may damage the card or the slot.
- (4) Attach the PC card protector to the unit as shown below.

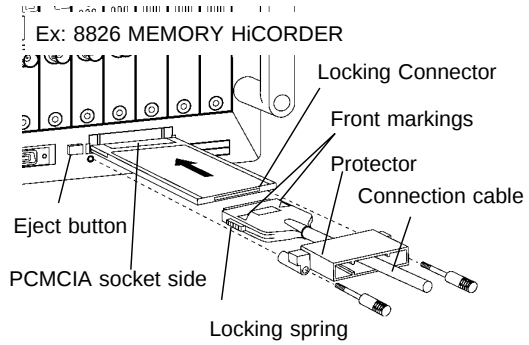


■ Removing the PC card

- (1) Remove the PC card protector.
- (2) To remove the PC card, press the eject button.

NOTE Do not press the eject button before removing the PC card protector.

5. Specifications

Applicable standards	PC card standard, IEEE1284 parallel port
Control code	ESC/P, ESC/P raster
Adapted model	8826 (after ver.1.00) 8835 (after ver.2.00) 8841 (after ver.1.00) 8842 (after ver.1.00)
Connection cable length	150 cm
connector type	Centronics 36 pin (female)
Dimention	Type II 54(W) × 85(H) × 5(D) mm
Accessories	Connection cable Instruction Manual

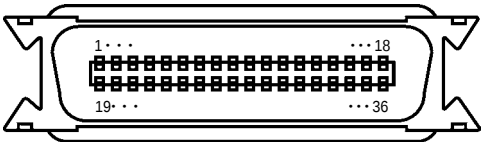

Pin	Signal	I/O	Pin	Signal	I/O
1	STB-	0	19	GND	-
2	PD0	I/O	20	GND	-
3	PD1	I/O	21	GND	-
4	PD2	I/O	22	GND	-
5	PD3	I/O	23	GND	-
6	PD4	I/O	24	GND	-
7	PD5	I/O	25	GND	-
8	PD6	I/O	26	GND	-
9	PD7	I/O	27	GND	-
10	ACK-	I	28	GND	-
11	BUSY	I	29	GND	-
12	PE	I	30	GND	-
13	SLCT	I	31	INIT-	0
14	AFD-	0	32	ERR-	I
15	NC	-	33	GND	-
16	NC	-	34	NC	-
17	NC	-	35	NC	-
18	NC	-	36	SLIN-	I

HIOKI

HIOKI E. E. CORPORATION

HEAD OFFICE

81 Koizumi, Ueda, Nagano 386-1192, Japan
TEL +81-268-28-0562 / FAX +81-268-28-0568
E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION

6 Corporate Drive, Cranbury, NJ 08512, USA
TEL +1-609-409-9109 / FAX +1-609-409-9108