

Z5000

固定スタンド / FIXED STAND

取扱説明書 / Instruction Manual

JA/EN

Nov. 2018 Revised edition 3
Z5000A980-03 18-11H



* 6 0 0 3 0 1 7 5 3 *

HIOKI

www.hioki.co.jp/

本社 〒386-1192 長野県上田市小泉 81

製品のお問い合わせ

☎ 0120-72-0560

9:00 ~ 12:00, 13:00 ~ 17:00
土・日・祝日を除く

TEL 0268-28-0560 FAX 0268-28-0569 info@hioki.co.jp

修理・校正のお問い合わせ

ご依頼はお買上店（代理店）または最寄りの営業拠点まで
お問い合わせはサービス窓口まで
TEL 0268-28-1688 cs-info@hioki.co.jp



1801JA

編集・発行 日置電機株式会社

Printed in Japan

- ・ CE 適合宣言は弊社 HP からダウンロードできます。
- ・ 本書の記載内容を予告なく変更することがあります。
- ・ 本書には著作権により保護される内容が含まれます。
- ・ 本書の内容を無断で転記・複製・改変することを禁止します。
- ・ 本書に記載されている会社名・商品名などは、各社の商標または登録商標です。

保証書

HIOKI

形名	製造番号	保証期間	購入日	年	月から3年間
----	------	------	-----	---	--------

お客様のご住所：〒
お名前：
お客様へのお願い
・保証書は再発行いたしませんので、大切に保管してください。
・「形名・製造番号・購入日」および「ご住所・お名前」をご記入ください。
※ご記入いただきました個人情報は修理サービスの提供および製品の紹介のみに使用します。
本製品は弊社の規格に従った検査に合格したことを証明します。本製品が故障した場合は、お買い求め先にご連絡ください。以下の保証内容に従い、本製品を修理または新品に交換します。ご連絡の際は、本書をご提示ください。

- 保証期間中は、本製品が正常に動作することを保証します。保証期間は購入日から3年間です。購入日が不明な場合は、本製品の製造年月（製造番号の左4桁）から3年間を保証期間とします。
 - 本製品に AC アダプターが付属している場合、その AC アダプターの保証期間は購入日から1年間です。
 - 測定値などの精度の保証期間は、製品仕様別途規定しています。
 - それぞれの保証期間内に本製品または AC アダプターが故障した場合、その故障の責任が弊社にあると弊社が判断したときは、本製品または AC アダプターを無償で修理または新品と交換します。
5. 以下の故障、損傷などは、無償修理または新品交換の保証の対象外とします。
- 消耗品、有寿命部品などの故障と損傷
 - コネクタ、ケーブルなどの故障と損傷
 - お買い上げ後の輸送、落下、移動などにより記載された内容に反する不適切な取り扱いによる故障と損傷
 - 取扱説明書、本体ラベル、刻印などに記載された内容に反する不適切な取り扱いによる故障と損傷
 - 法令、取扱説明書などで要求された保守・点検を怠ったことにより発生した故障と損傷
 - 火災、風水害、地震、落雷、電磁波の異常（電圧、周波数など）、戦争、暴動、放射能汚染、その他の不可抗力による故障と損傷
 - 外観の損傷（筐体の傷、変形、退色など）
 - そのほかその責任が弊社にあるとみなされない故障と損傷
6. 以下の場合は、本製品を保証の対象外とします。修理、校正などもお断りします。
- 弊社以外の企業、機関、もしくは個人が本製品を修理した場合、または改造した場合
 - 特殊な用途（宇宙用、航空用、原子力用、医療用、車両用など）の機器に本製品を組み込んで使用することを、事前に弊社にご連絡いただかない場合
7. 製品を使用したことにより発生した損失に対しては、その損失の責任が弊社にあると弊社が判断した場合、本製品の購入金額までを補償します。ただし、以下の損失に対しては補償しません。
- 本製品を使用したことにより発生した被測定物の損害に起因する二次的な損害
 - 本製品による測定の結果に起因する損害
 - 本製品と互いに接続した（ネットワーク経由の接続を含む）本製品以外の機器への損害
8. 製造後一定期間を経過した製品、および部品の生産中止、不測の事態の発生などにより修理できない製品は、修理、校正などを断りすることがあります。

日置電機株式会社 https://www.hioki.co.jp/

18-06 JA-3

■ はじめに

このたびは、HIOKI Z5000 固定スタンドをご選定いただき、誠にありがとうございます。この製品を十分にご活用いただき、末長くご使用いただくためにも、取扱説明書はていねいに扱い、いつもお手元に置いてご使用ください。

■ 概要

Z5000 固定スタンドは、HIOKI LR8400/LR8401/LR8402 メモリハイロガーを固定するためのスタンドです。卓上スタンドおよびパネルマウント金具として使用できます。

■ 点検

- ・ 本器がお手元に届きましたら、輸送中において異常または破損がないか点検してからご使用ください。特に付属品に注意してください。万一、破損あるいは仕様どおり動作しない場合は、お買上店（代理店）か最寄りの営業所にご連絡ください。

付属品：

固定金具（2 個）、固定金具固定用小ネジ M3X6（2 本）、支持足金具（1 枚）、支持足金具固定用ネジ M3X6（3 本）

- ・ 使用前には、保存や輸送による故障がないか、点検してから使用してください。故障を確認した場合は、お買上店（代理店）か最寄りの営業所にご連絡ください。

■ 保守・サービス

- ・ 本器の汚れをとるときは、柔らかい布に水か中性洗剤を少量含ませて、軽く拭いてください。ベンジン、アルコール、アセトン、エーテル、ケトン、シンナー、ガソリン系を含む洗剤は絶対に使用しないでください。変形、変色することがあります。
- ・ 故障と思われるときは、お買上店（代理店）か最寄りの営業所にご連絡ください。
- ・ 輸送中に破損しないように梱包し、故障内容も書き添えてください。輸送中の破損については保証しかねます。

■ Z5000 固定スタンドを組み立てる、メモリハイロガーをセットする




1. 本体裏面に支持足金具を合わせ、正面からネジを差し込んで固定する。

- ・ はじめに 1 箇所仮止めすると、作業しやすくなります。
- ・ 支持足金具の付け方でスタンドの傾きが異なります。

傾き 30 度にする場合




傾き 50 度にする場合

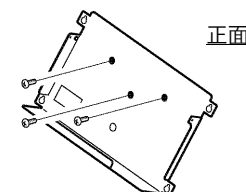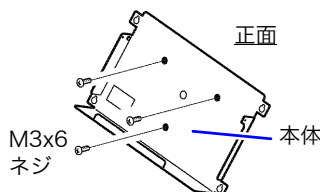

2. 本体正面にメモリハイロガーをセットする。


3. 本体側面の固定用穴に固定金具の突起を合わせ、外側からネジを差し込んで固定する。

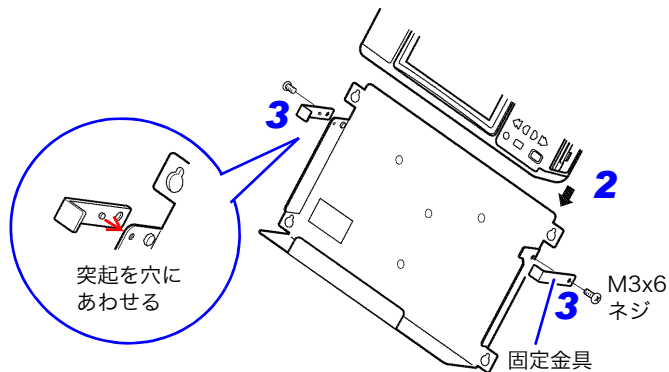

注記

壁に取り付ける場合

支持足金具は取り付けません。固定金具は必ず取り付けます。M4 ネジ 4 本で固定スタンドを壁に固定します。（下図：ネジ穴位置寸法図）

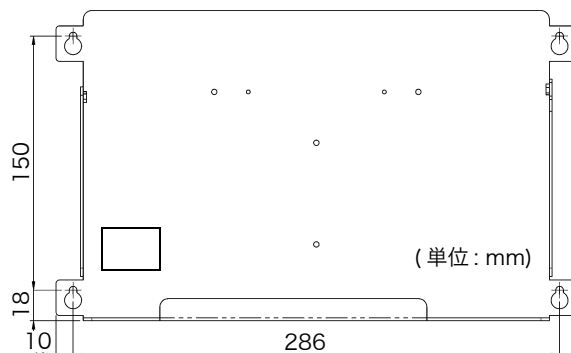

※ ネジは付属していませんので、市販の物をご利用ください。推奨するネジの長さは 8 mm 以上です。

Z5000

FIXED STAND

Instruction Manual

EN

Nov. 2018 Revised edition 3
Z5000A980-03 18-11H

HIOKI



Our regional
contact
information

<http://www.hioki.com>

HEADQUARTERS

81 Koizumi
Ueda, Nagano 386-1192 Japan

HIOKI EUROPE GmbH

Rudolf-Diesel-Strasse 5
65760 Eschborn, Germany
hioki@hioki.eu

1808EN

Edited and published by HIOKI E.E. CORPORATION

Printed in Japan

- CE declarations of conformity can be downloaded from our website.
- Contents subject to change without notice.
- This document contains copyrighted content.
- It is prohibited to copy, reproduce, or modify the content of this document without permission.
- Company names, product names, etc. mentioned in this document are trademarks or registered trademarks of their respective companies.

Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of three(3) years from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

Introduction

Thank you for purchasing the HIOKI Model Z5000 Fixed Stand. To obtain maximum performance from the product, please read this manual first, and keep it handy for future reference.

Overview

The Z5000 stand is a fixed mounting bracket for the Hioki LR8400-series Memory HiLoggers. It can be used as a desk stand, or for panel wall mounting.

Inspection

- When you receive the product, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

Accessories:

Fixing metal (2pcs), M3x6 screw for Fixing metal (2pcs), Supporting metal leg (1pc), M3x6 screw for Supporting metal leg (3pcs)

- Before using the product the first time, verify that it operates normally to ensure that no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.

Maintenance and Service



- To clean the product, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.

- If the product seems to be malfunctioning, contact your dealer or Hioki representative.
- Pack the product so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.



Assembling the Z5000, and Setting the HiLogger

1. Place the supporting metal leg on the backside of the bracket, and insert the screws from the front of the bracket.
 - To make it easier, fasten a screw tentatively at first.
 - The stand angle varies depending on fixing way of the supporting metal leg.

Inclination angle: 30 degree

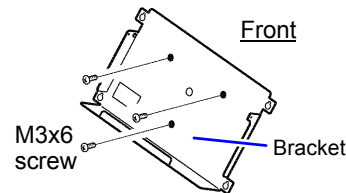


Inclination angle: 50 degree

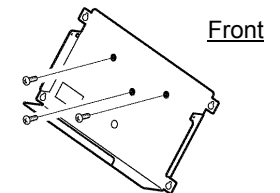

2. Place the HiLogger on the front of the bracket.


3. Put the projection of the fixing metal into the hole on the side of the bracket, and affix it using the screw. Do it on the other side.

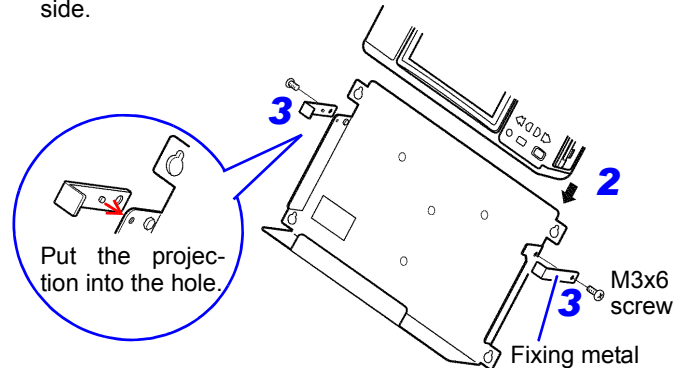

NOTE

Wall mounting

Supporting metal leg will not be used. Surely fix the fixing metals to the bracket. Mount the bracket to the wall by inserting the M4 screws through the bracket mounting holes. (Following diagrams: mounting hole templates)

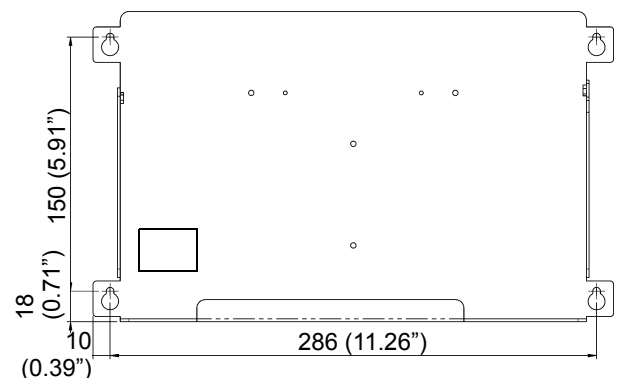

Unit: mm (inch)

- * M4 screws are not supplied. Please use commercially available M4 screws.
(Recommendable screw length: 8 mm or above)