
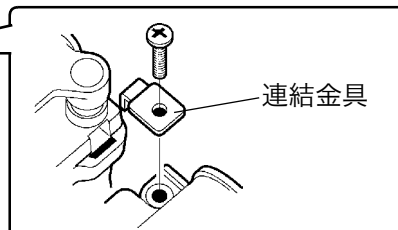


本体への取り付け方法

LR8500A981-00 10-09


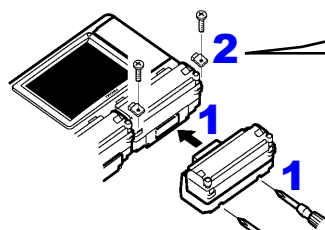


1 本体側ユニットと増設ユニットのコネクタをあわせて押し込み、増設ユニットに装着されているネジ2か所で固定する。

2 増設ユニット付属の連結金具で本体側ユニットと増設ユニットを2か所固定して、ネジをしっかりと締める。

本体への取り付け方法

LR8500A981-00 10-09

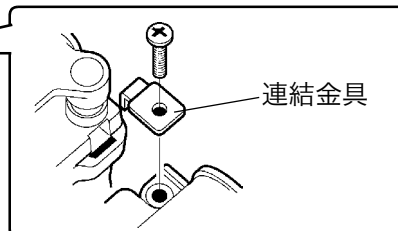
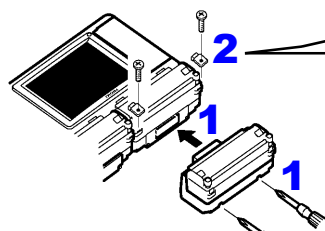


1 本体側ユニットと増設ユニットのコネクタをあわせて押し込み、増設ユニットに装着されているネジ2か所で固定する。

2 増設ユニット付属の連結金具で本体側ユニットと増設ユニットを2か所固定して、ネジをしっかりと締める。

本体への取り付け方法

LR8500A981-00 10-09

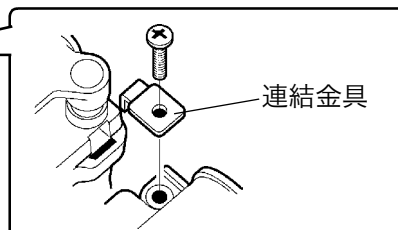
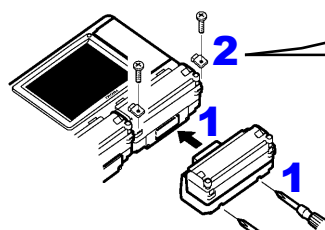


1 本体側ユニットと増設ユニットのコネクタをあわせて押し込み、増設ユニットに装着されているネジ2か所で固定する。

2 増設ユニット付属の連結金具で本体側ユニットと増設ユニットを2か所固定して、ネジをしっかりと締める。

本体への取り付け方法

LR8500A981-00 10-09

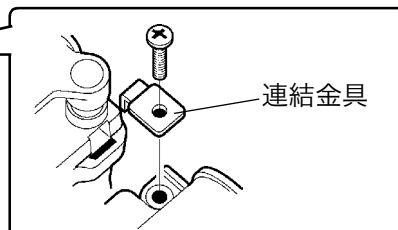
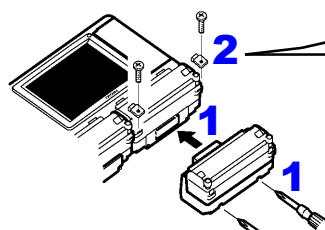


1 本体側ユニットと増設ユニットのコネクタをあわせて押し込み、増設ユニットに装着されているネジ2か所で固定する。

2 増設ユニット付属の連結金具で本体側ユニットと増設ユニットを2か所固定して、ネジをしっかりと締める。

本体への取り付け方法


LR8500A981-00 10-09

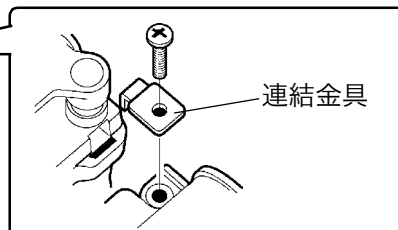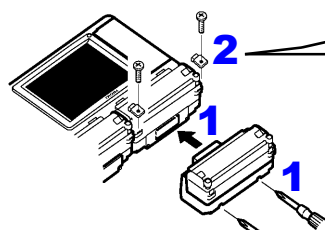

1 本体側ユニットと増設ユニットのコネクタをあわせて押し込み、増設ユニットに装着されているネジ2か所で固定する。


2 増設ユニット付属の連結金具で本体側ユニットと増設ユニットを2か所固定して、ネジをしっかりと締める。

Attaching the LR8500/LR8501 to the instrument

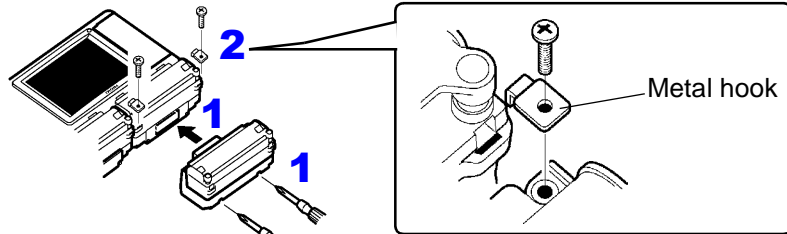


- 1** Align the connectors on the instrument-side unit and expansion unit and insert the unit. Tighten in place with the two screws on the expansion unit.
- 2** Lock the instrument-side unit and expansion unit in place with the two metal hooks included with the expansion unit, tightening the screws securely.

Attaching the LR8500/LR8501 to the instrument

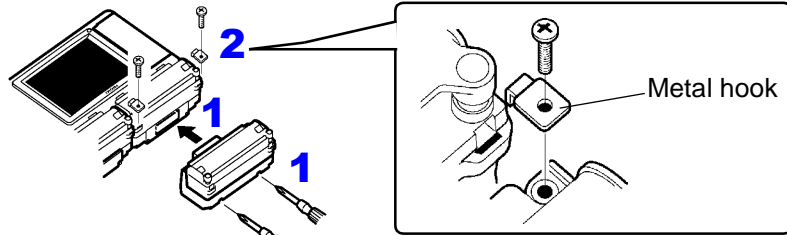


- 1** Align the connectors on the instrument-side unit and expansion unit and insert the unit. Tighten in place with the two screws on the expansion unit.
- 2** Lock the instrument-side unit and expansion unit in place with the two metal hooks included with the expansion unit, tightening the screws securely.

Attaching the LR8500/LR8501 to the instrument

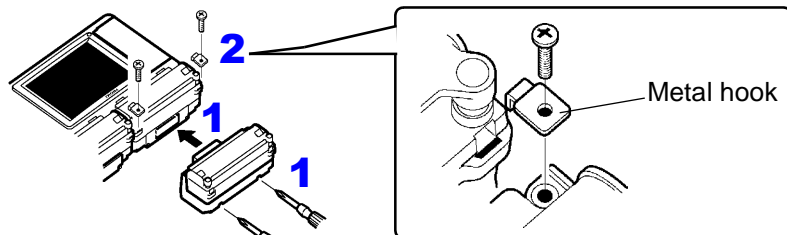


- 1** Align the connectors on the instrument-side unit and expansion unit and insert the unit. Tighten in place with the two screws on the expansion unit.
- 2** Lock the instrument-side unit and expansion unit in place with the two metal hooks included with the expansion unit, tightening the screws securely.

Attaching the LR8500/LR8501 to the instrument

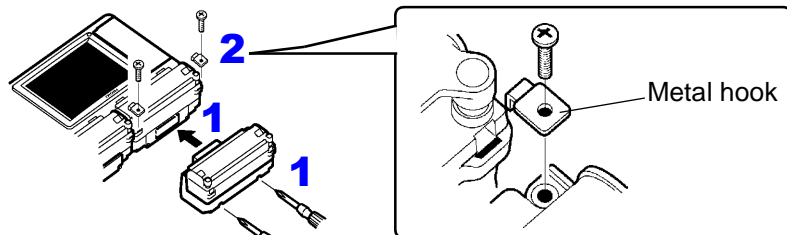

- 1** Align the connectors on the instrument-side unit and expansion unit and insert the unit. Tighten in place with the two screws on the expansion unit.
- 2** Lock the instrument-side unit and expansion unit in place with the two metal hooks included with the expansion unit, tightening the screws securely.

Attaching the LR8500/LR8501 to the instrument

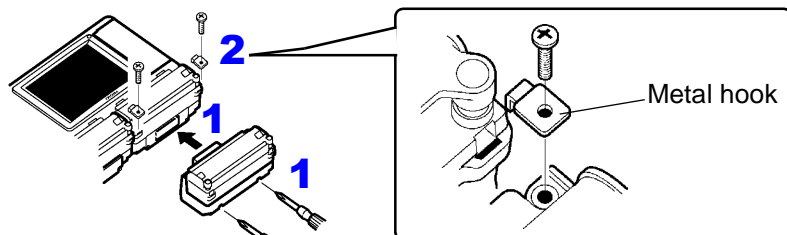

- 1** Align the connectors on the instrument-side unit and expansion unit and insert the unit. Tighten in place with the two screws on the expansion unit.
- 2** Lock the instrument-side unit and expansion unit in place with the two metal hooks included with the expansion unit, tightening the screws securely.