

HIOKI

9652-01 FIXED STAND

Instruction Manual

Printed in Japan

Introduction

Thank you for purchasing the Hioki 9652-01 FIXED STAND. To obtain maximum performance from the instrument, please read this manual first, and keep it handy for future reference. The 9652-01 FIXED STAND is designed for use with the Hioki MEMORY HiLOGGERS. The 9652-01 FIXED STAND can be used as a tabletop, belt-fixed, or Mounting fixture.

HIOKI

HIOKI E. E. CORPORATION

HEAD OFFICE

81 Koizumi, Ueda, Nagano 386-1192, Japan
TEL +81-268-28-0562 / FAX +81-268-28-0568
E-mail: os-com@hioki.co.jp/
URL <http://www.hioki.co.jp/>
HIOKI USA CORPORATION
6 Corporate Drive, Cranbury, NJ 08512, USA
TEL +1-609-409-9109 / FAX +1-609-409-9108

Initial Inspection

When you receive the instrument, inspect it carefully to ensure that no damage occurred during shipping. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.


Maintenance

To clean the instrument, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinner or gasoline, as they can deform and discolor the case.

Assembling the 9652-01 FIXED STAND

When using the 9652-01 as a tabletop stand, attach the stand holder, support stoppers, and the stand.

Place the stand holder between the support stoppers and the metal plate, and affix it using M3 x 12 flat head screws.

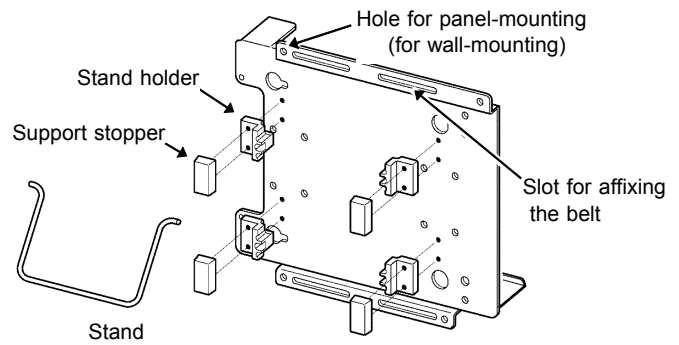


NOTE

The 9652-01 can also be attached to a DIN rail by using the DIN rail attachment.

For the DIN rail attachment, contact Hioki representative.

Attaching the MEMORY HiLOGGER

Remove the two screws that hold the cover of the MEMORY HiLOGGER in place, and affix the unit to the stand from the rear using the four screws (two M3 x 8 and two M4 x 50 flat head screws) provided with the 9652-01 FIXED STAND. The two screws (M4 x 45) removed from the MEMORY HiLOGGER will not be used.

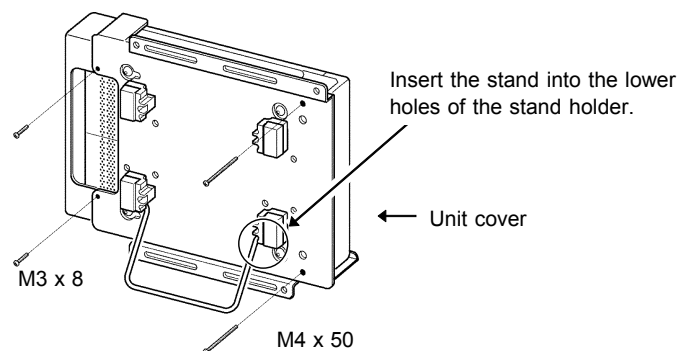

NOTE

- If the stand is inserted into the upper holes of the stand holder, the weight of the unit may cause the stand to tip over. Make sure you insert the stand into the lower holes of the stand holder.
- When the 8992 PRINTER unit is connected to this unit, paper will not feed properly if the MEMORY HiLOGGER is vertical. Lay the MEMORY HiLOGGER horizontal while printing.
- Model 9652-01 FIXED STAND cannot be used with the 9329 TERMINAL UNIT at the same time.