

9588

GP-IB インタフェース GP-IB INTERFACE

取扱説明書 / Instruction Manual

2013年9月 改訂5版
Printed in Japan
9588A980-05 13-09H



HIOKI

日置電機株式会社

■ 製品のお問い合わせはコールセンターまで

0120-72-0560 9:00~12:00, 13:00~17:00
土・日・祝日を除く

TEL 0268-28-0560 FAX 0268-28-0569 E-mail info@hioki.co.jp

■ 修理・校正のご依頼はお買上店（代理店）または最寄りの営業所まで
また、ご不明な点がありましたらサービスお問合せ窓口まで
TEL 0268-28-0823 FAX 0268-28-0824 E-mail cs-info@hioki.co.jp

■ お問い合わせ・販売ネットワーク

<http://www.hioki.co.jp/contact/>



本社 〒386-1192 長野県上田市小泉 81
TEL 0268-28-0555 FAX 0268-28-0559

1308

警告


- 感電事故を避けるため、9588 GP-IB インタフェースの追加や交換は電源を OFF にし、電源コードや結線を外して行ってください。ねじ止めをしっかりとしないと、仕様を満足しなくなったり、故障の原因になります。
- 感電事故を避けるため、9588 GP-IB インタフェースを抜いたままでの使用はしないでください。9588 GP-IB インタフェースを抜いておくときは、ブランクパネルを装着してください。

取付け方法

測定器のリアパネルには、GP-IB インタフェースを取付けるためのスペースが、ブランクパネルにより覆われています。

次の(1)~(3)の手順で装着してください。

- ブランクパネルを取り外します。
(ネジはなくさないでください)
- ガイドレールで測定器本体の内部のレールをはさむようにして、GP-IB インタフェースを差し込みます。
(下図参照)
- しっかりと差し込みましたら、(1)で取り外したネジで必ず止めてください。

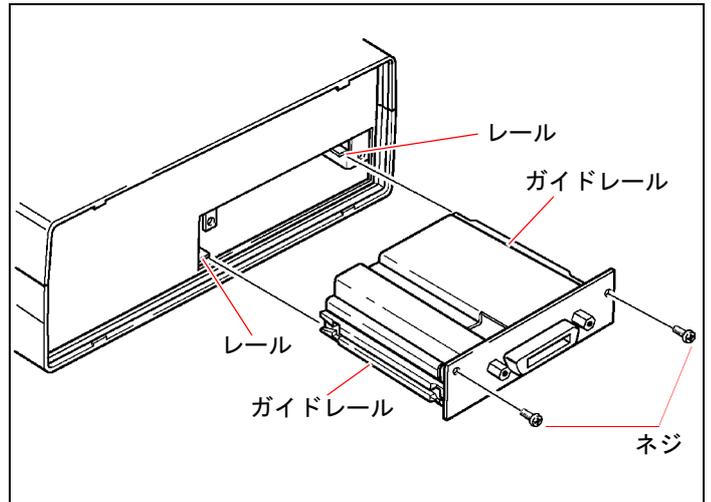

注記

3560 のシリアル番号が 2001-0533965 以前の場合に動作しないことがあります。その場合は最寄りの営業所にご連絡ください。

保証書 HIOKI

形名 9588	製造番号	保証期間 購入日 年 月 日より 1年間
---------	------	-------------------------

本製品は、弊社の厳密な検査を経て合格した製品をお届けした物です。万が一使用中に故障が発生した場合は、お買い求め先にご連絡ください。本書の記載内容で無償修理をさせていただきます。また、保証期間は購入日より1年間です。購入日が不明の場合は、製品の製造年月から1年を目安とします。ご連絡の際は、本書を提示してください。また、確度については、明示された確度保証期間によります。

—お客様—

ご住所：〒
ご芳名：_____

* お客様へのお願い

- 保証書の再発行はいたしませんので、大切に保管してください。
- 「製造番号、購入日」およびお客様「ご住所、ご芳名」は恐れ入りますが、お客様にて記入していただきますようお願いいたします。

- 取扱説明書・本体注意ラベル（刻印を含む）等の注意事項に従った正常な使用状態で保証期間内に故障した場合には、無償修理いたします。また、製品のご使用による損失の補償請求に対しては、弊社審議の上購入金額までの補償とさせていただきます。なお、製造後一定期間を経過したものとおよび部品の生産中止、不測の事態の発生等により修理不可能となった場合は、修理、校正等を辞退する場合がございます。
- 保証期間内でも、次の場合には保証の対象外とさせていただきます。
 - 製品を使用した結果生じる被測定物の、二次的、二次的な損傷、被害
 - 製品の測定結果がもたらす、二次的、二次的な損傷、被害
 - 取扱説明書に基づかない不適当な取り扱い、または使用による故障
 - 弊社以外による修理や改造による故障および損傷
 - 取扱説明書に明示されたものを含む部品の消耗
 - お買い上げ後の輸送、落下等による故障および損傷
 - 外観上の変化（塵体のキズ等）
 - 火災、風水害、地震、落雷、電源異常（電圧、周波数等）、戦争・暴動行為、放射能汚染およびその他天災地災等の不可抗力による故障および損傷
 - 各種通信・ネットワーク接続による損害
 - 保証書の提出が無い場合
 - その他弊社の責任とみなされない故障
 - 特殊な用途（宇宙用機器、航空用機器、原子力用機器、生命に関わる医療用機器および車輻制御機器等）に組み込んで使用する場合で、前もってその旨を連絡いただかない場合
- 本保証書は日本国内のみ有効です。(This warranty is valid only in Japan.)

サービス記録

年月日	サービス内容

日置電機株式会社
〒386-1192 長野県上田市小泉 81
TEL 0268-28-0555
FAX 0268-28-0559

9588

GP-IB INTERFACE

Instruction Manual

September 2013 Revised edition 5 Printed in Japan
9588A980-05 13-09H

HIOKI

HIOKI E. E. CORPORATION

Headquarters

81 Koizumi, Ueda, Nagano 386-1192, Japan
TEL +81-268-28-0562 FAX +81-268-28-0568
E-mail: os-com@hioki.co.jp URL <http://www.hioki.com/>
(International Sales and Marketing Department)

1307

For regional contact information, please go to our website at
<http://www.hioki.com>.

The Declaration of Conformity for instruments that comply to CE
mark requirements may be downloaded from the HIOKI website.

Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of one (1) year from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.


! WARNING

- To avoid electrical shock, before adding or replacing interface of 9588 GP-IB, check that the main unit is powered off and power cord is disconnected. (The fixing screws must be firmly tightened, or the input unit may not function up to specification, or may even fail.)
- To avoid the danger of electric shock, never operate the main unit with a GP-IB interface removed. If you should wish to use the unit after removing an input unit, fit a blanking panel over the opening of the removed unit.

Installing

The space for fitting the 9588 GP-IB INTERFACE in the rear panel of main unit is covered with a blanking plate. Follow these three steps to install the 9588:

- (1) Remove the fixing screws, and take off the blanking plate.
- (2) Insert the 9588 into the exposed slot in the rear of the main unit by sliding its guide rails provided on the sides of the inside of the slot. (See the figure below)
- (3) Push the 9588 firmly into place, and fix with the screw removed in step (1).

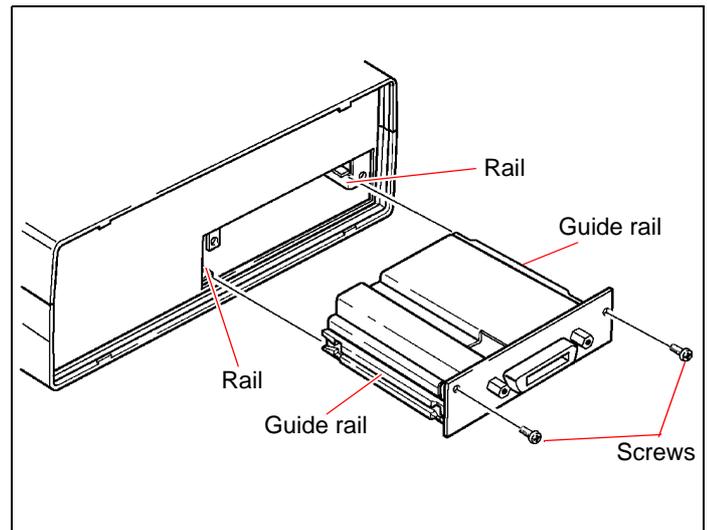

NOTE

If the serial number of the 3560 is lower than 2001-0533965, the 9588 GP-IB INTERFACE may not function. In this case, contact the nearest HIOKI sales representative.